

Fig. 1

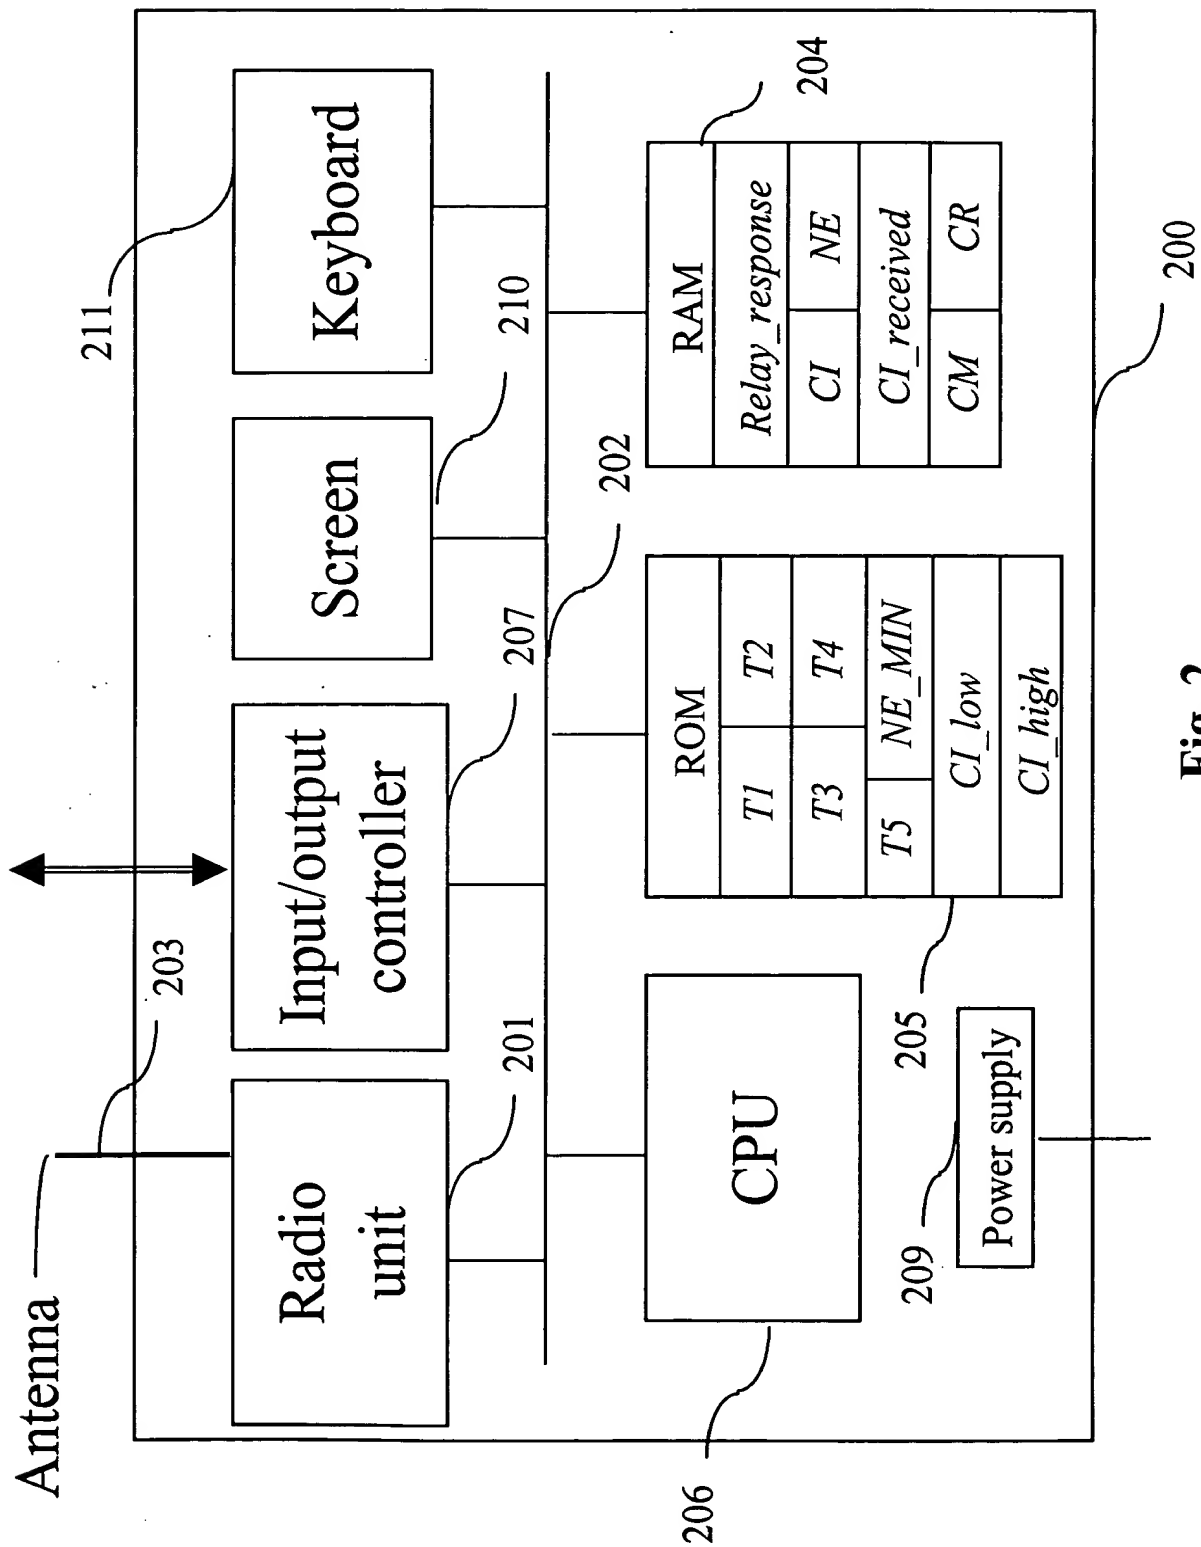


Fig. 2

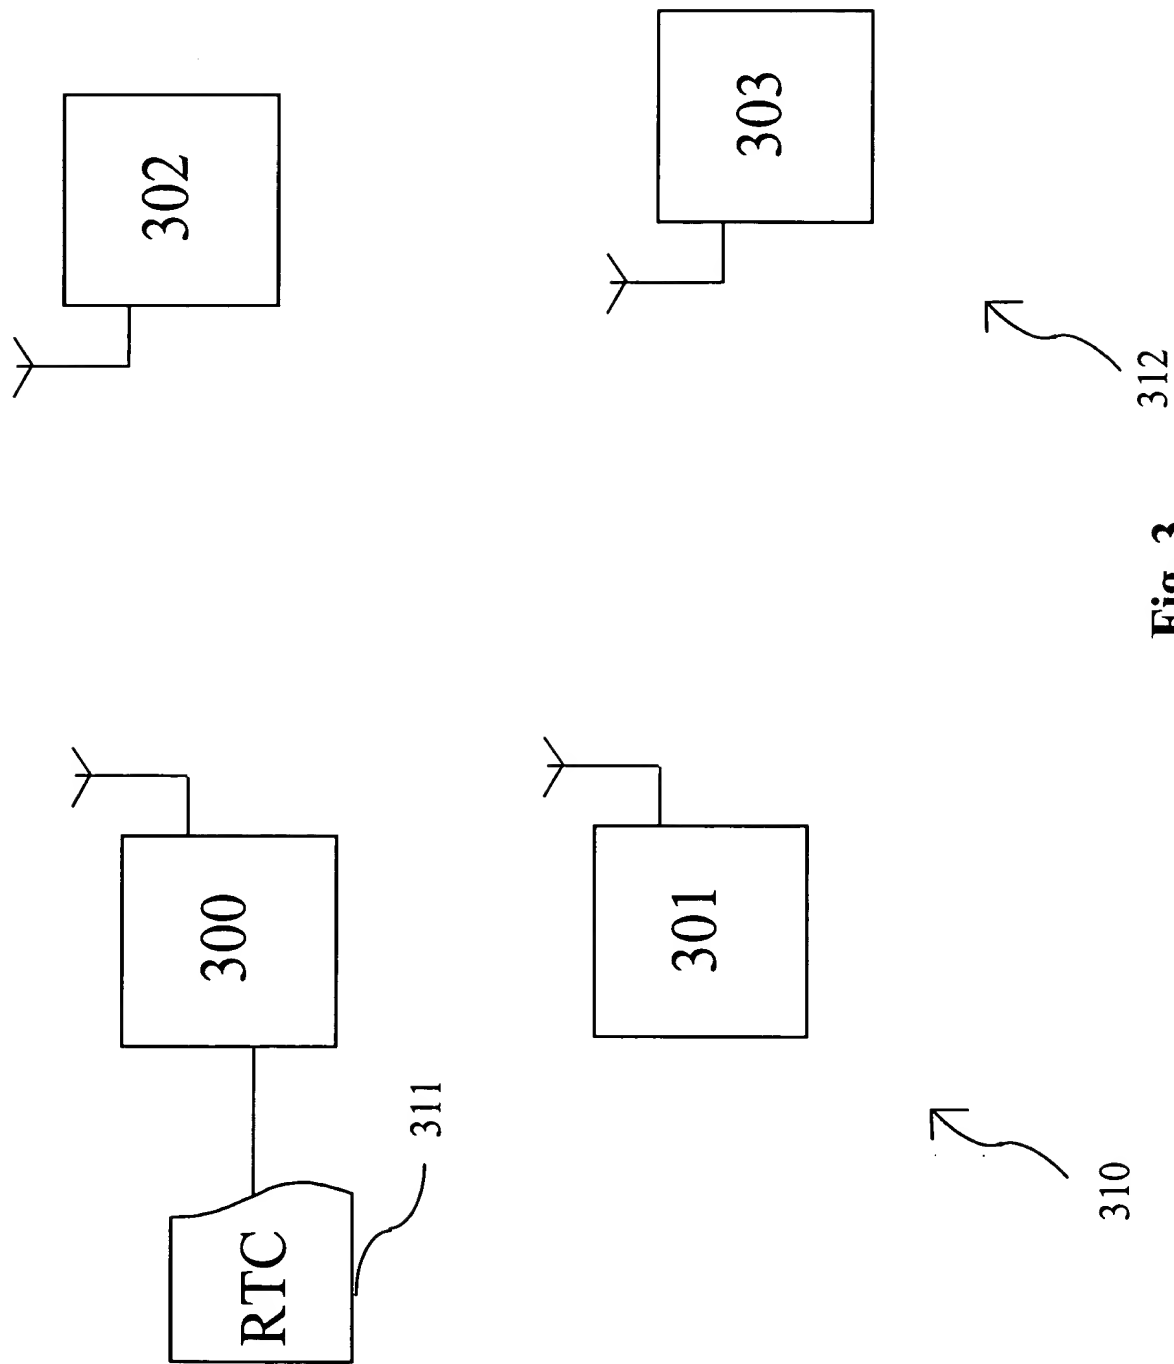


Fig. 3

300	Mode	Base
301	PP	300
302	PP	300
303	PP	300

Fig. 4a

300	Mode	Base
301	PP	300
302	PP	303
303	FP	300

Fig. 4b

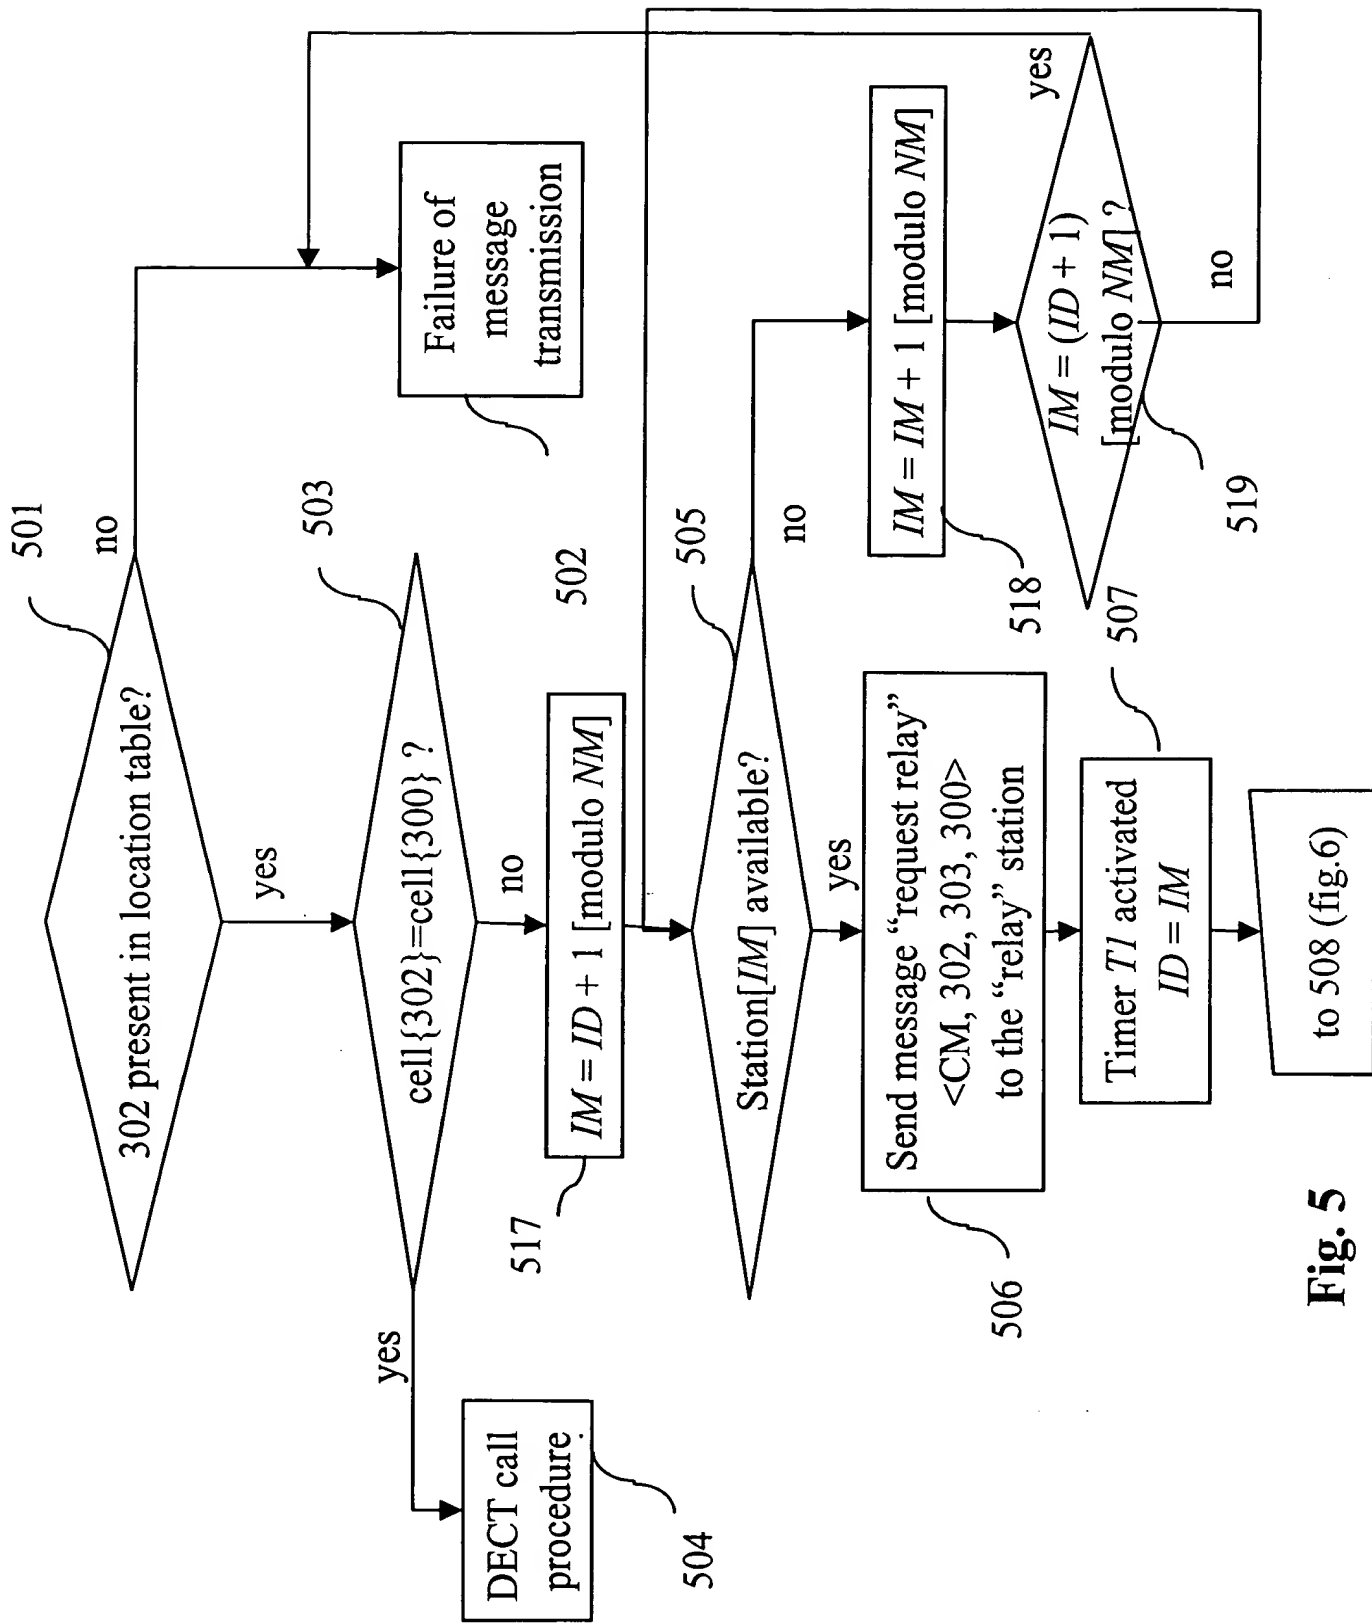


Fig. 5

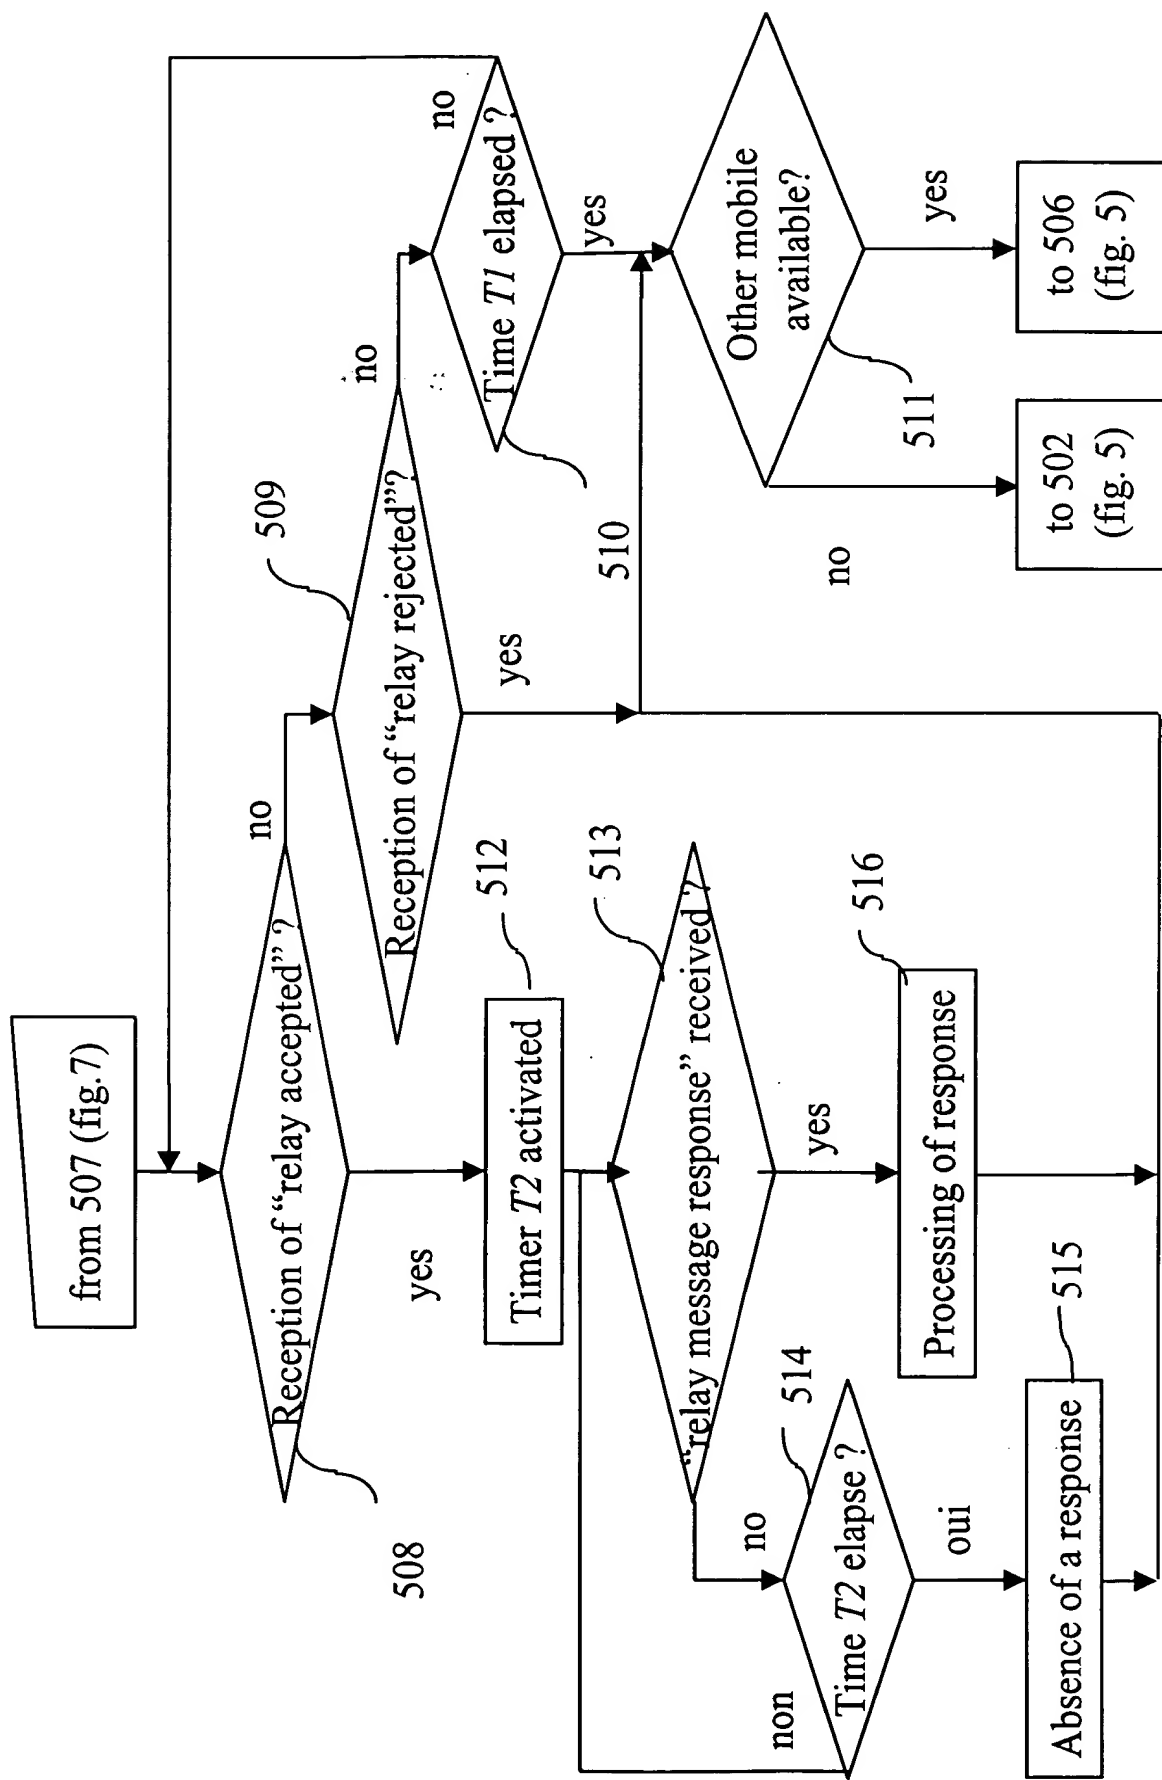


Fig. 6

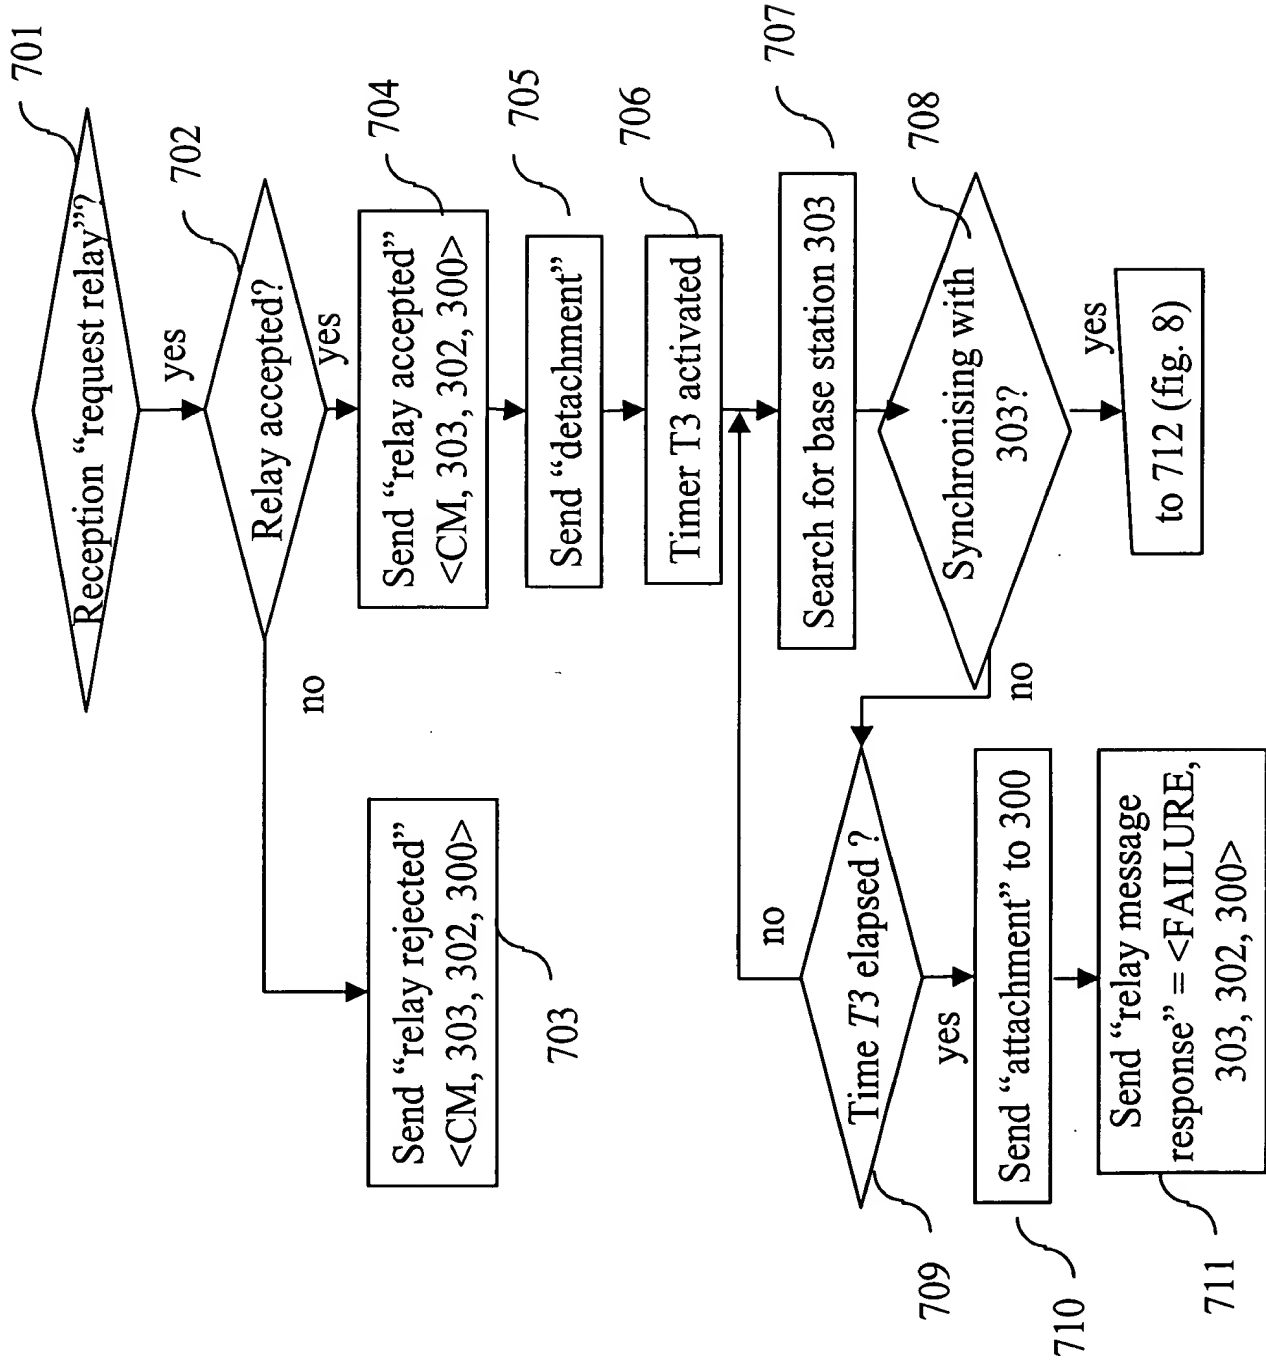


Fig. 7

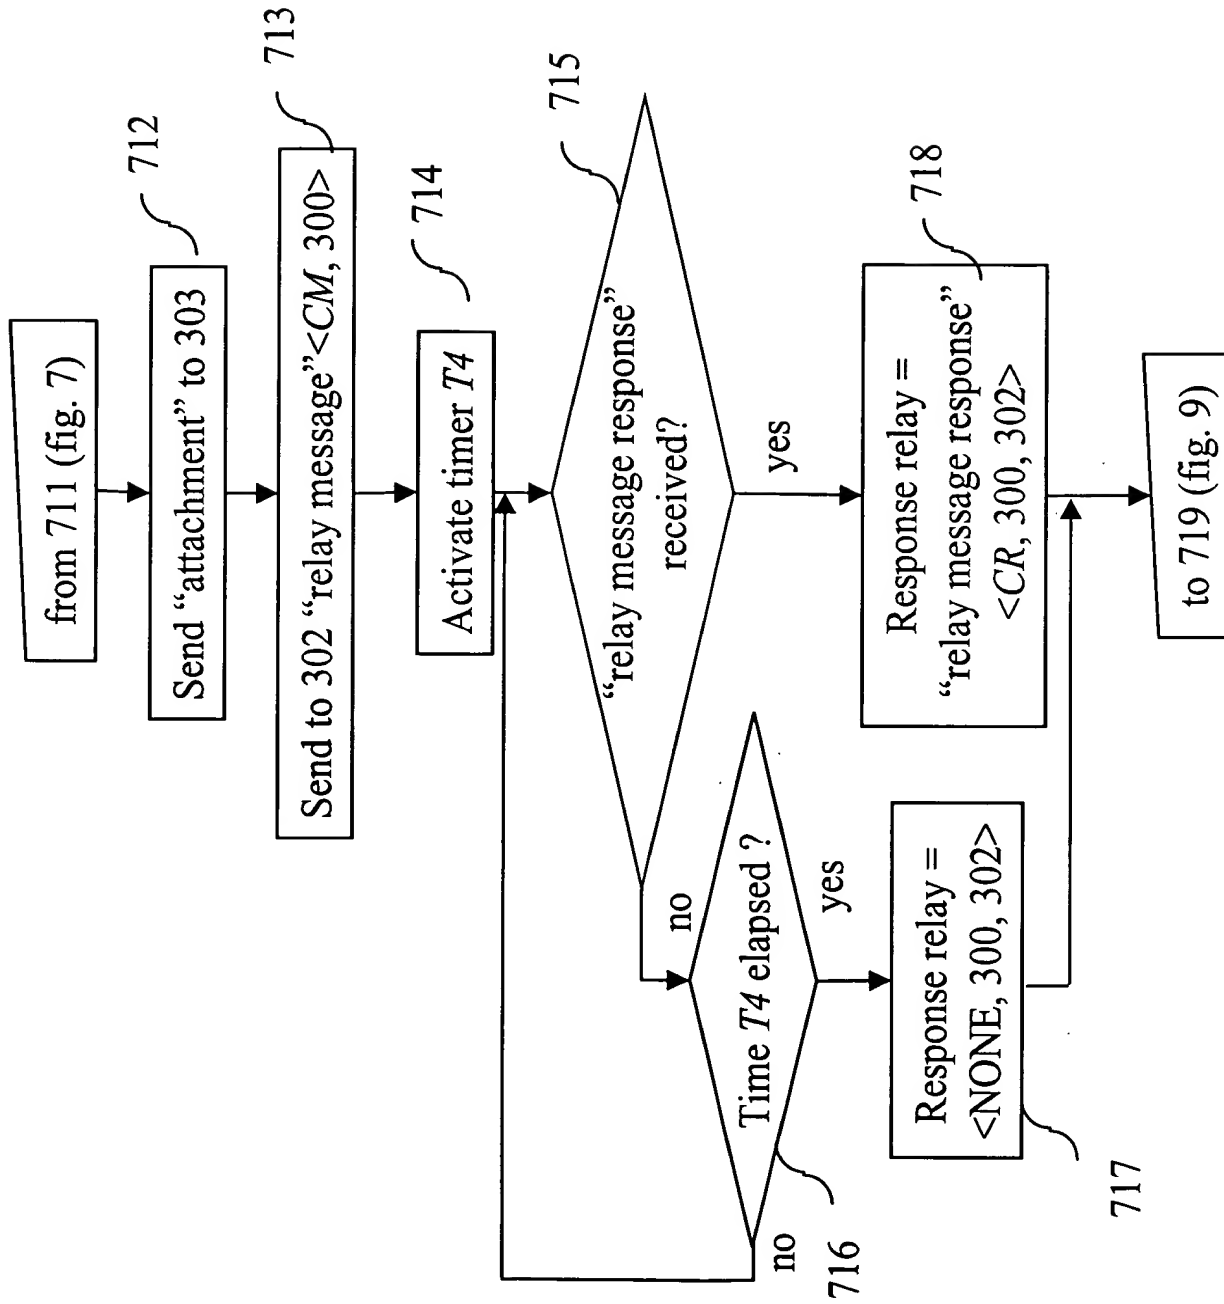


Fig. 8

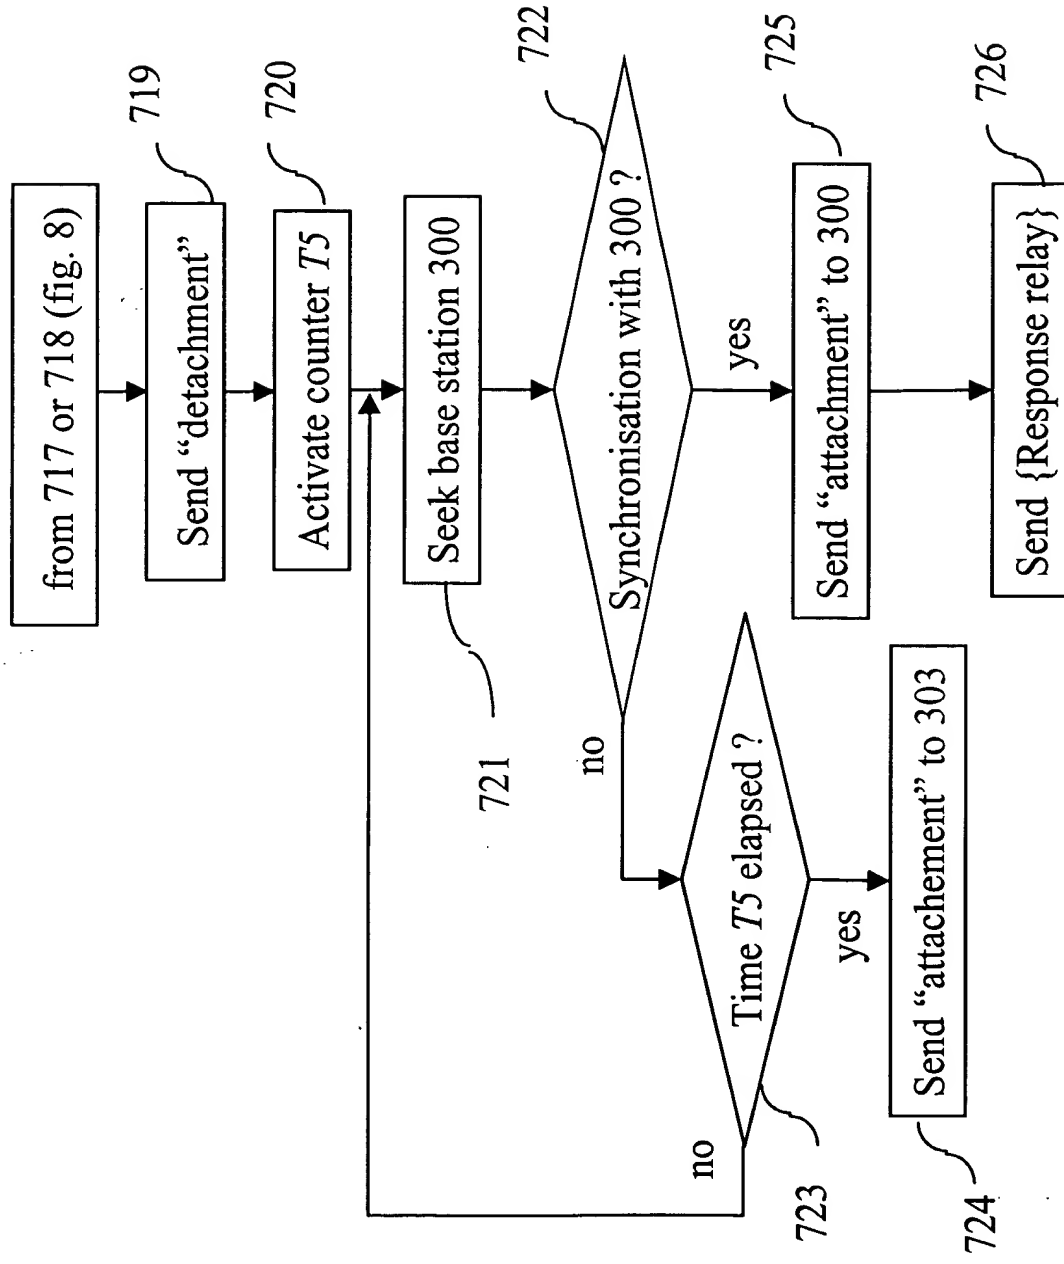


Fig. 9

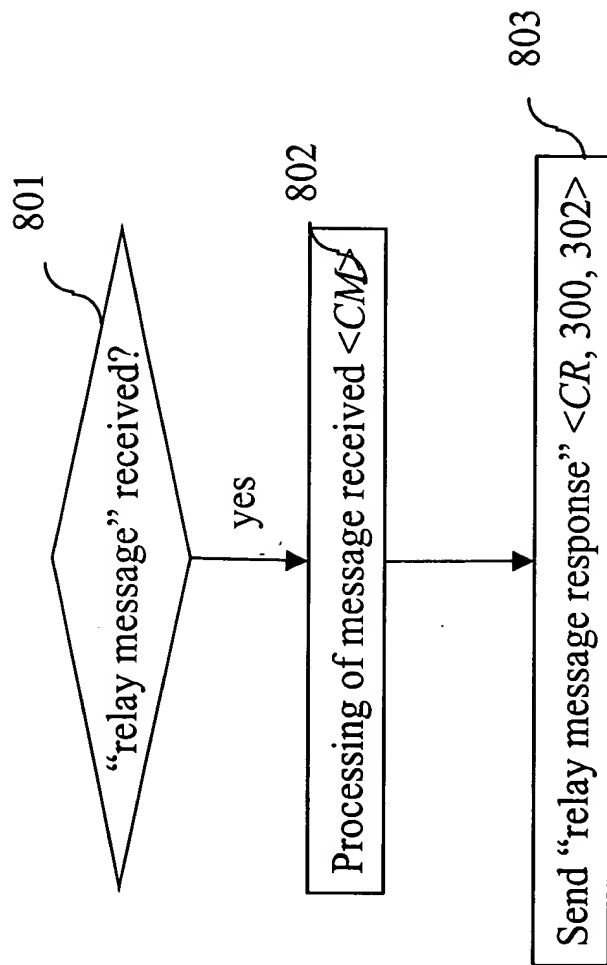


Fig. 10

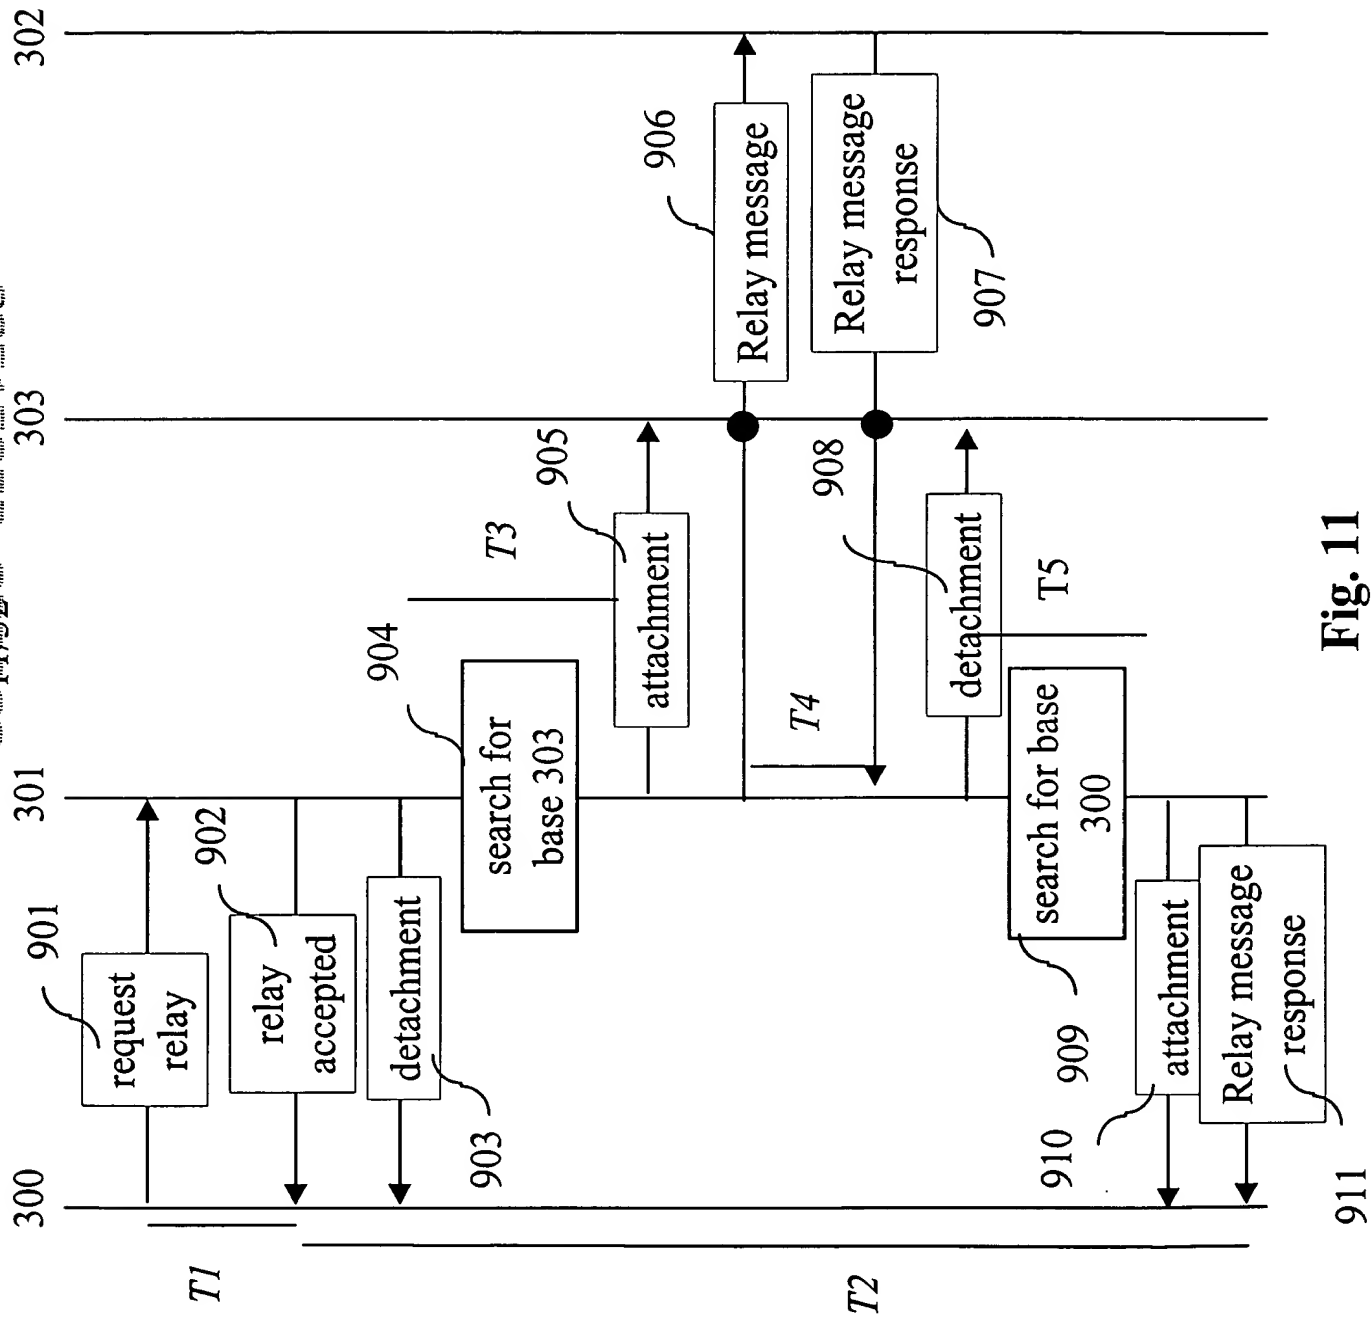


Fig. 11

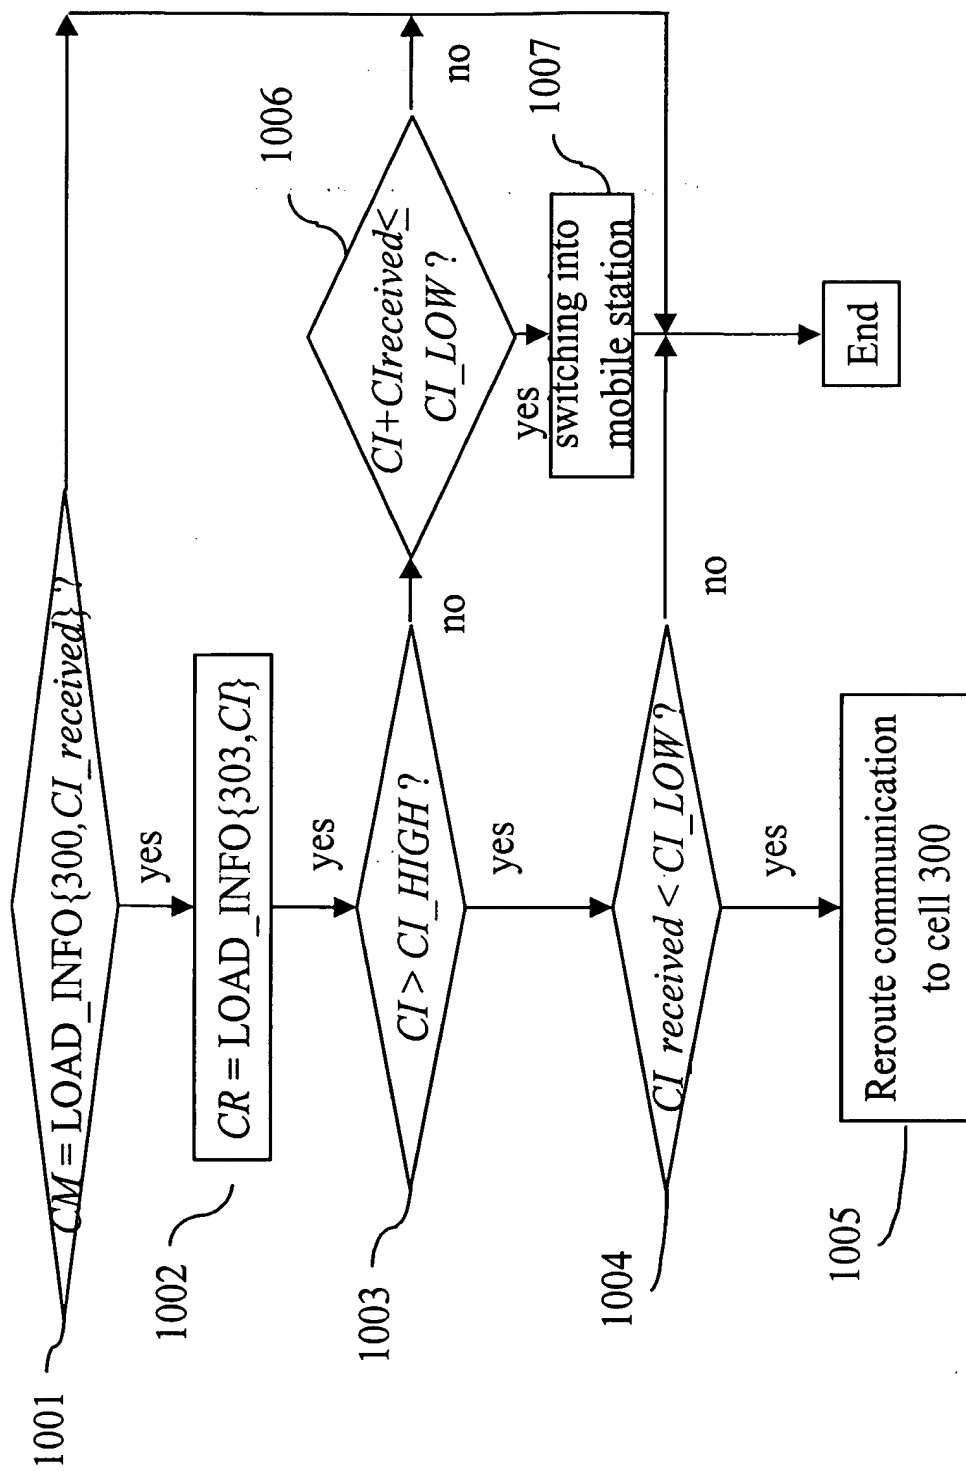


Fig. 12

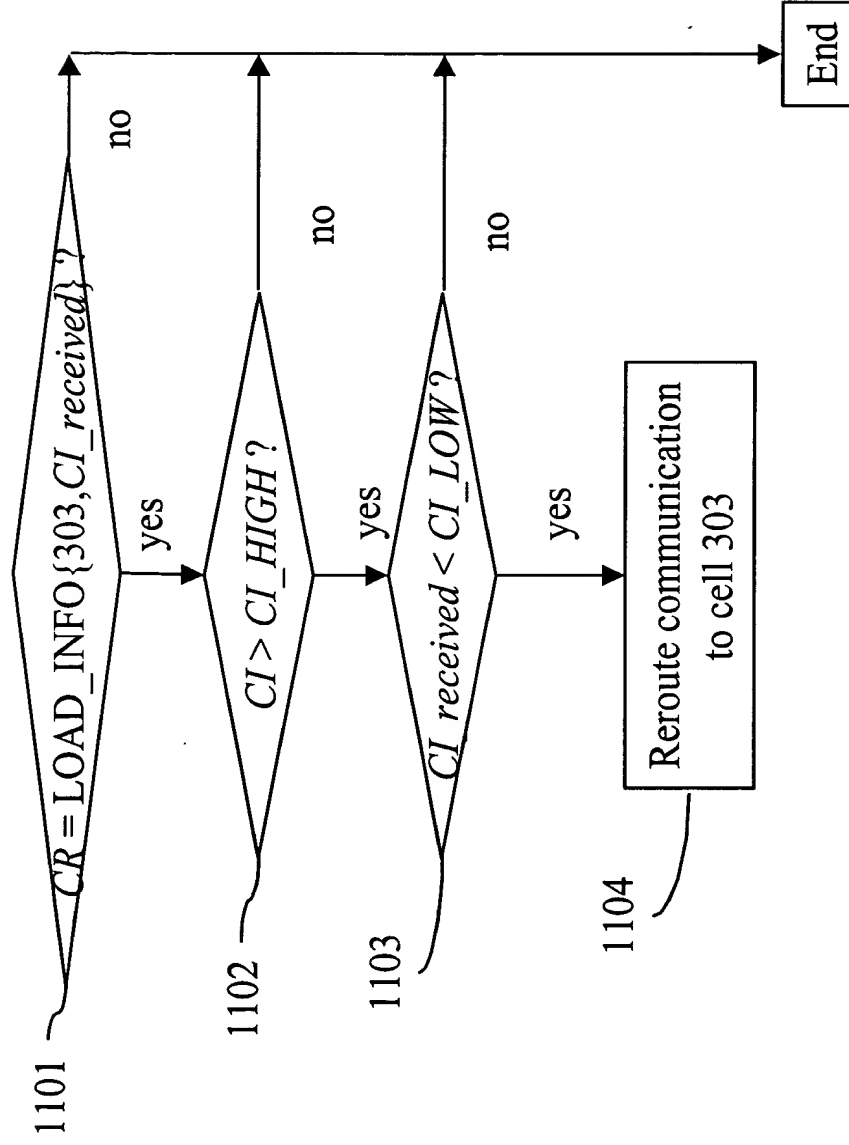


Fig. 13

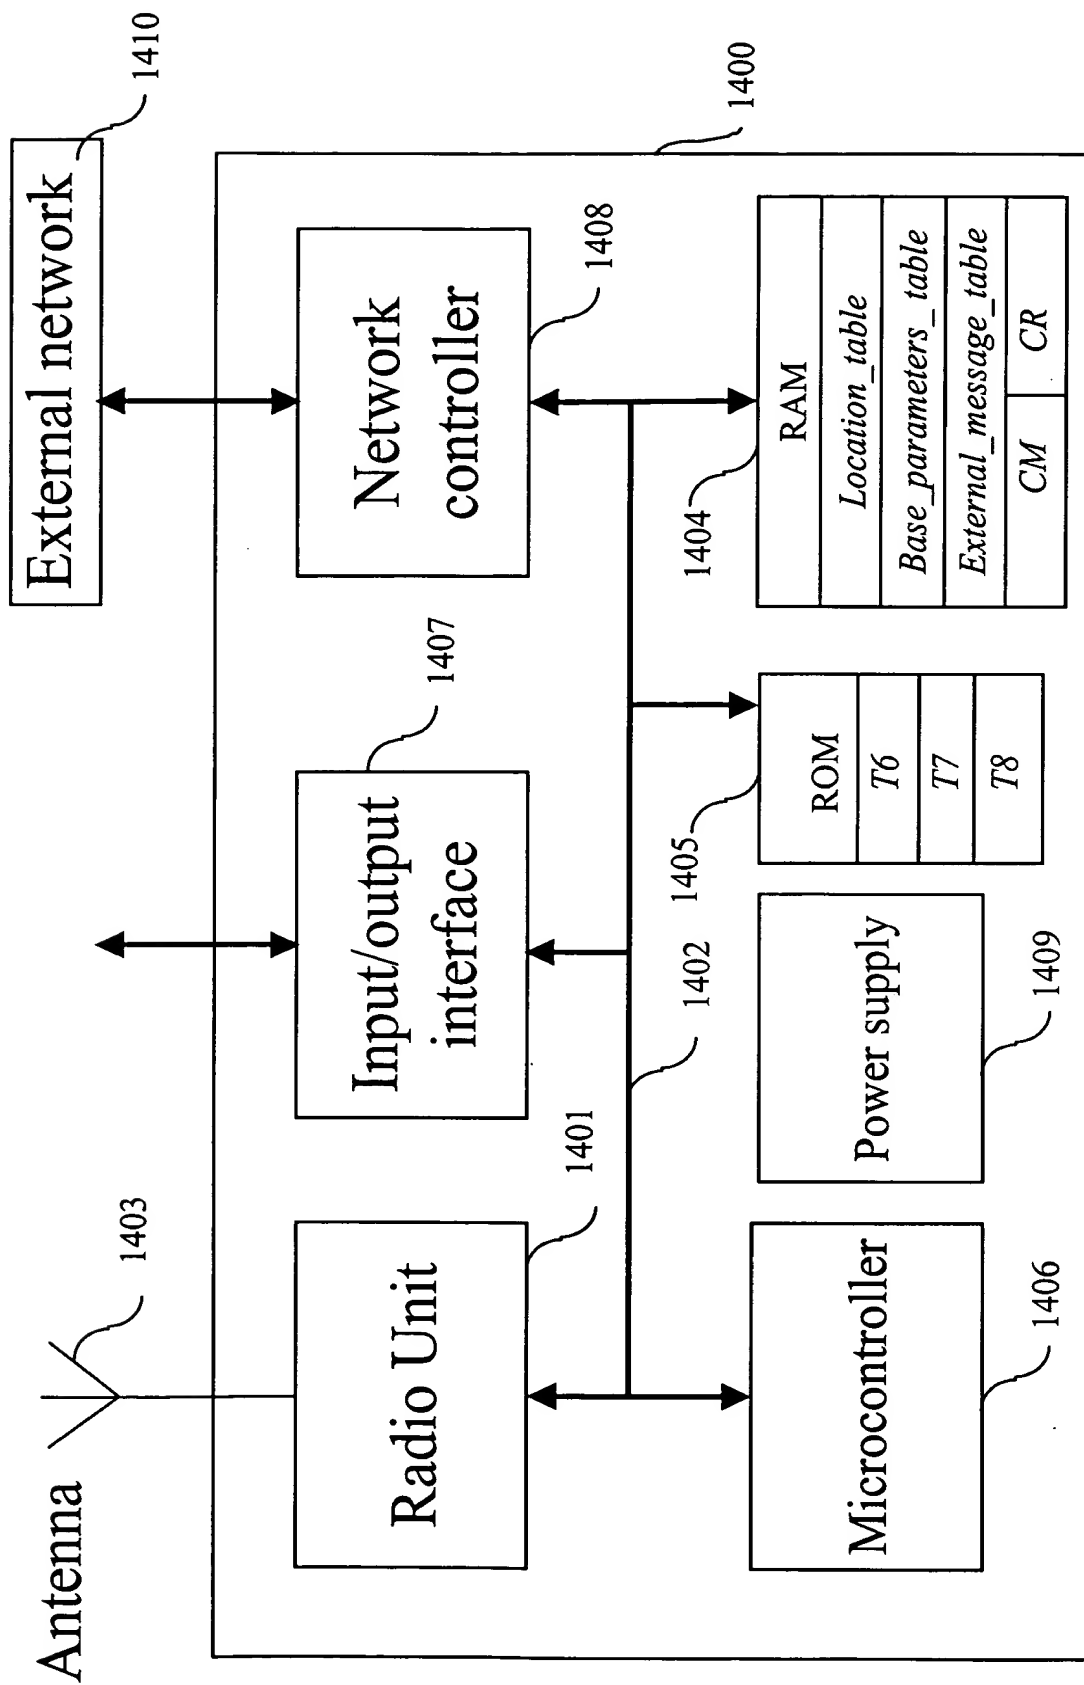


Fig. 14

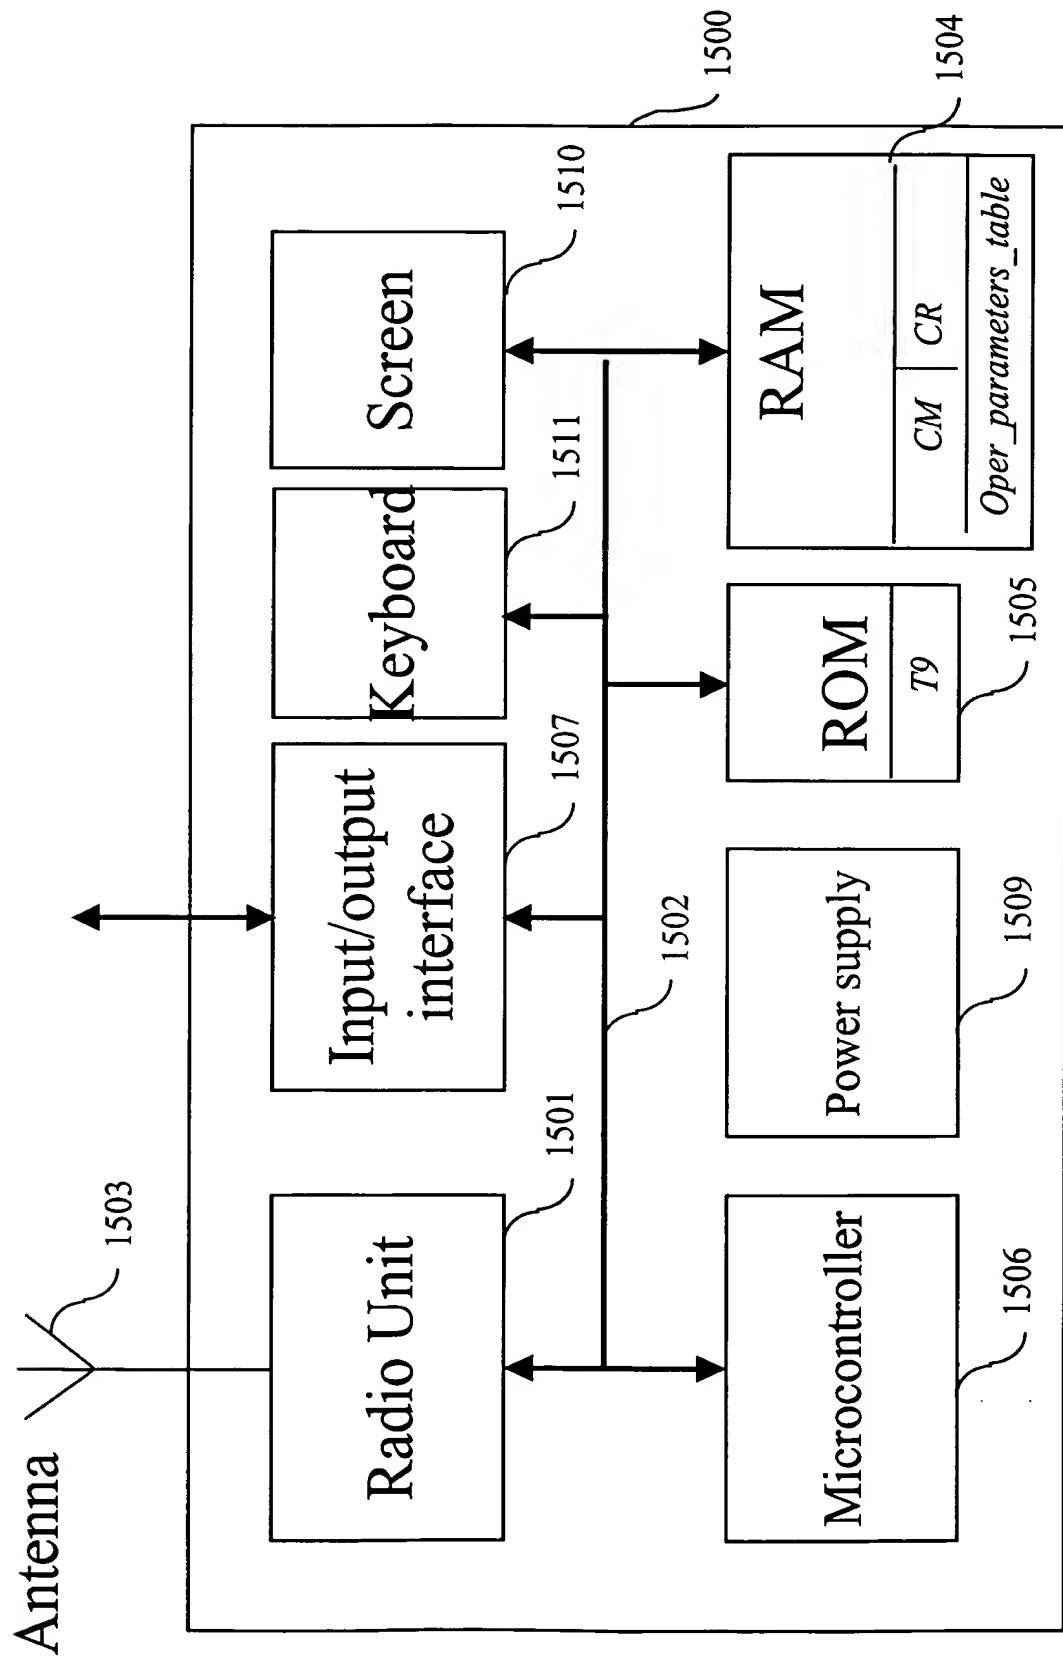


Fig. 15

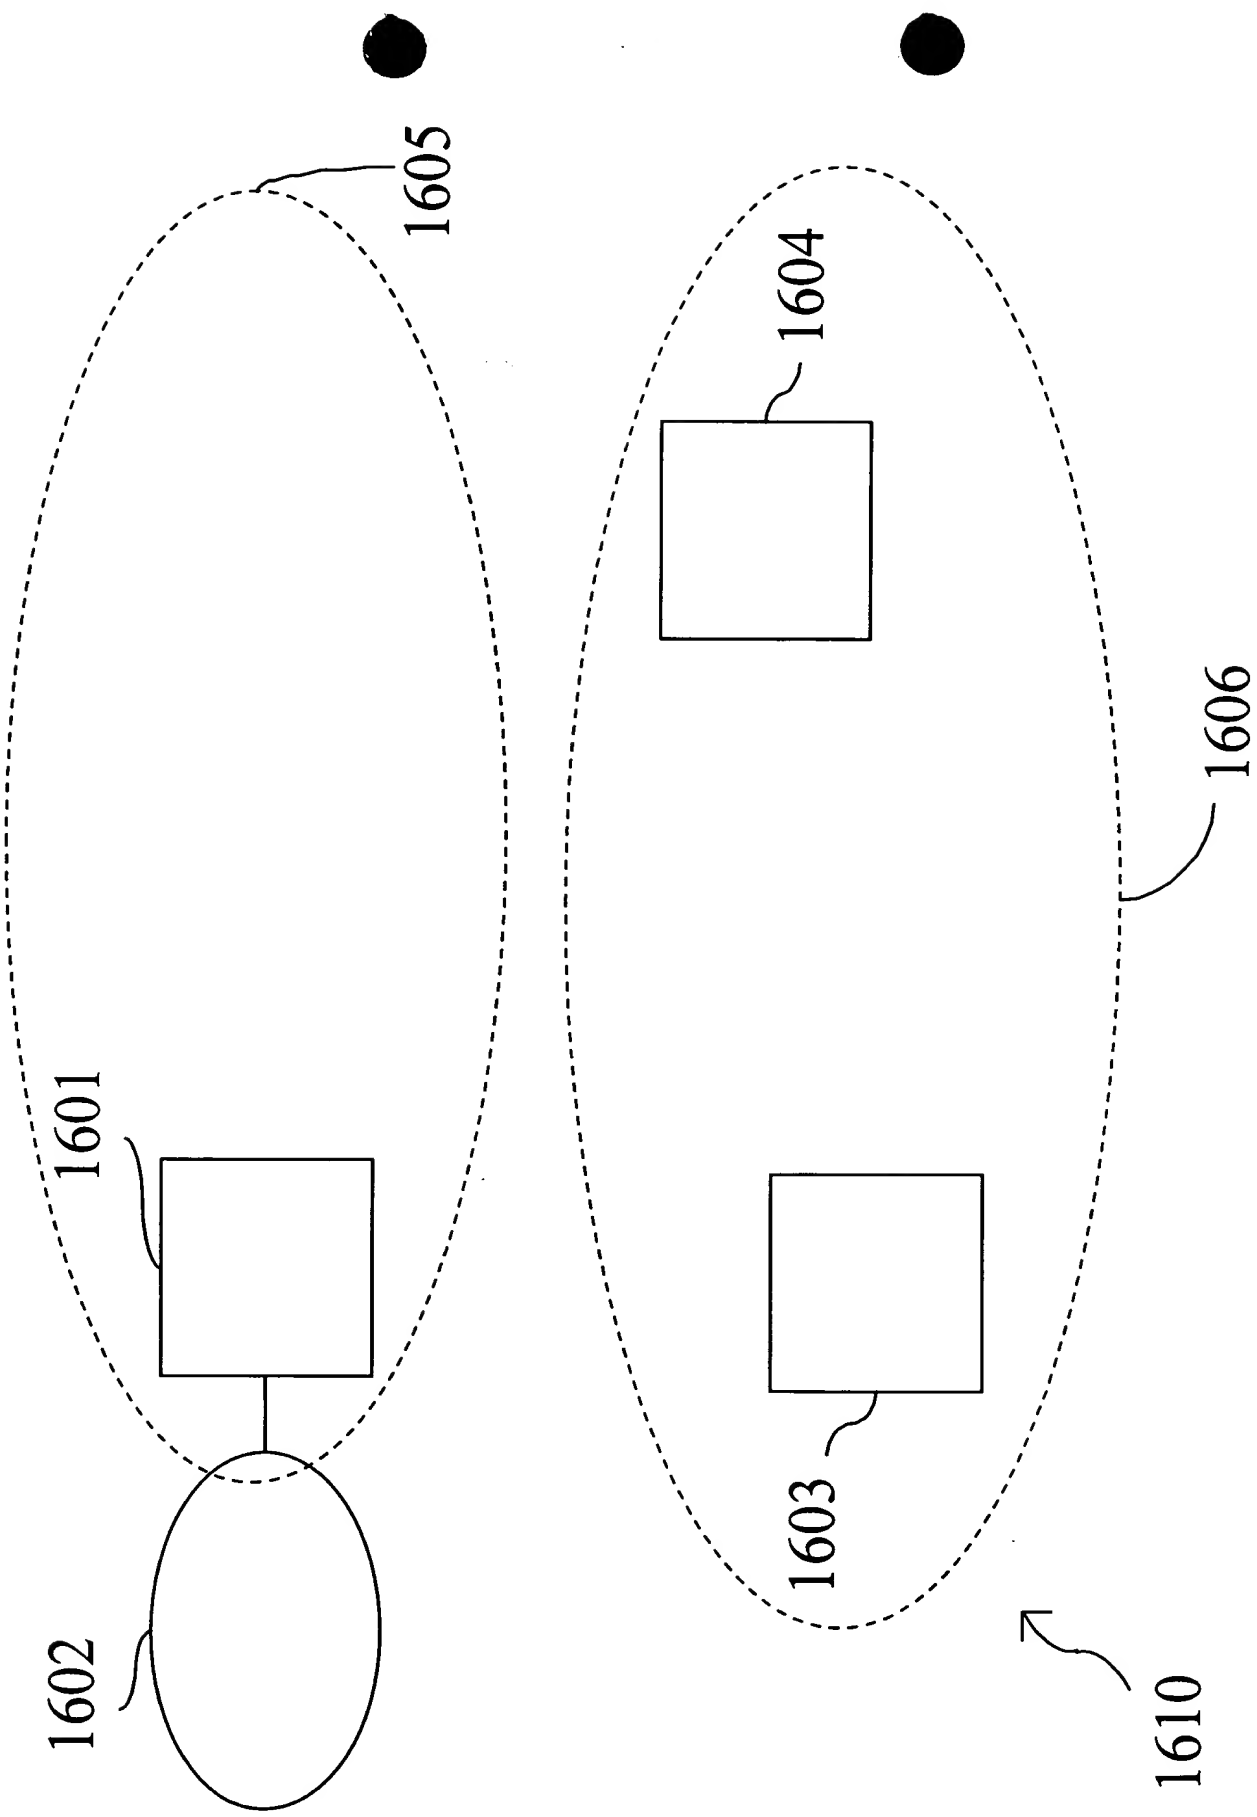


Fig. 16

1601	Mode	Base
1604	PP	1601
1603	PP	1601

Fig. 17a

1601	Mode	Base
1604	PP	1603
1603	FP	1601

Fig. 17b

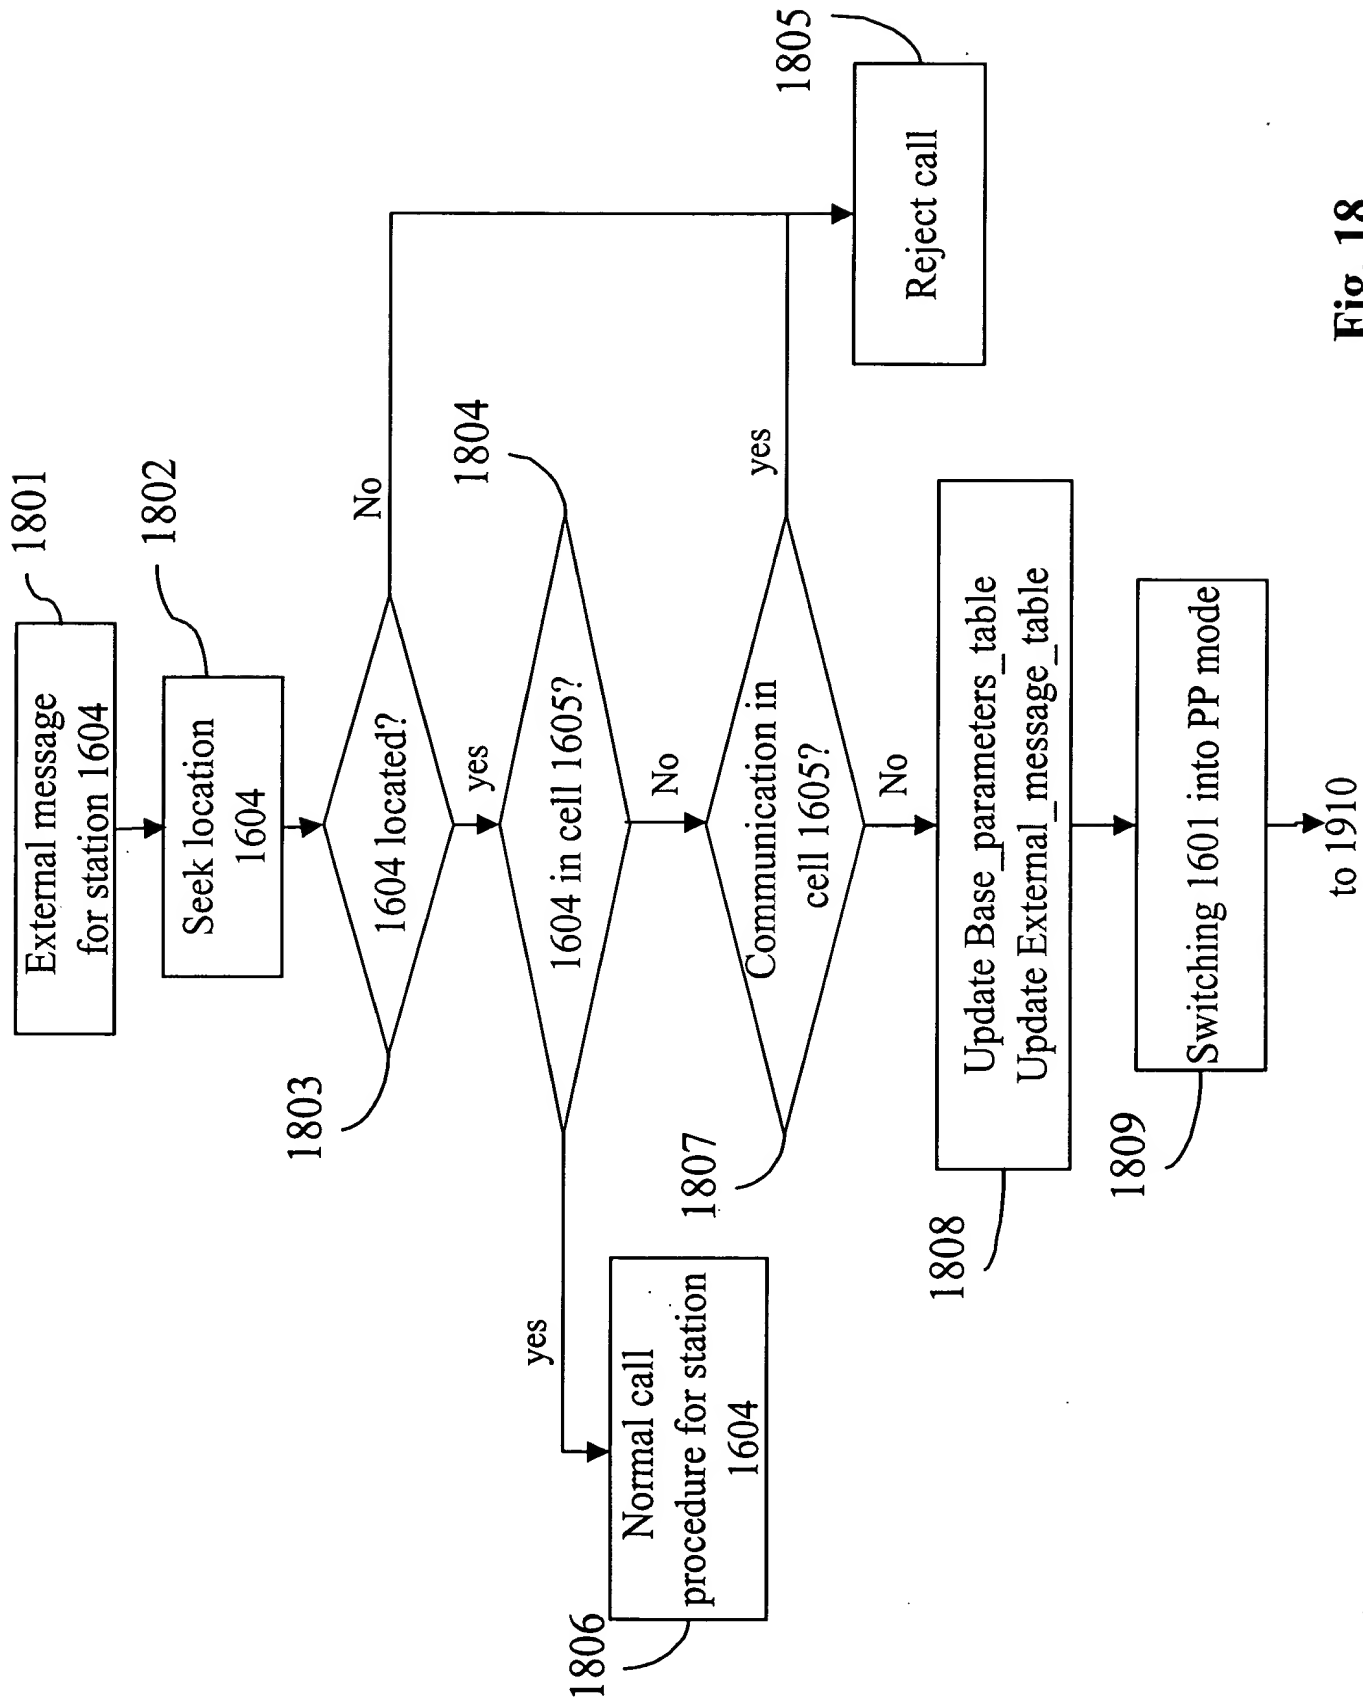


Fig. 18

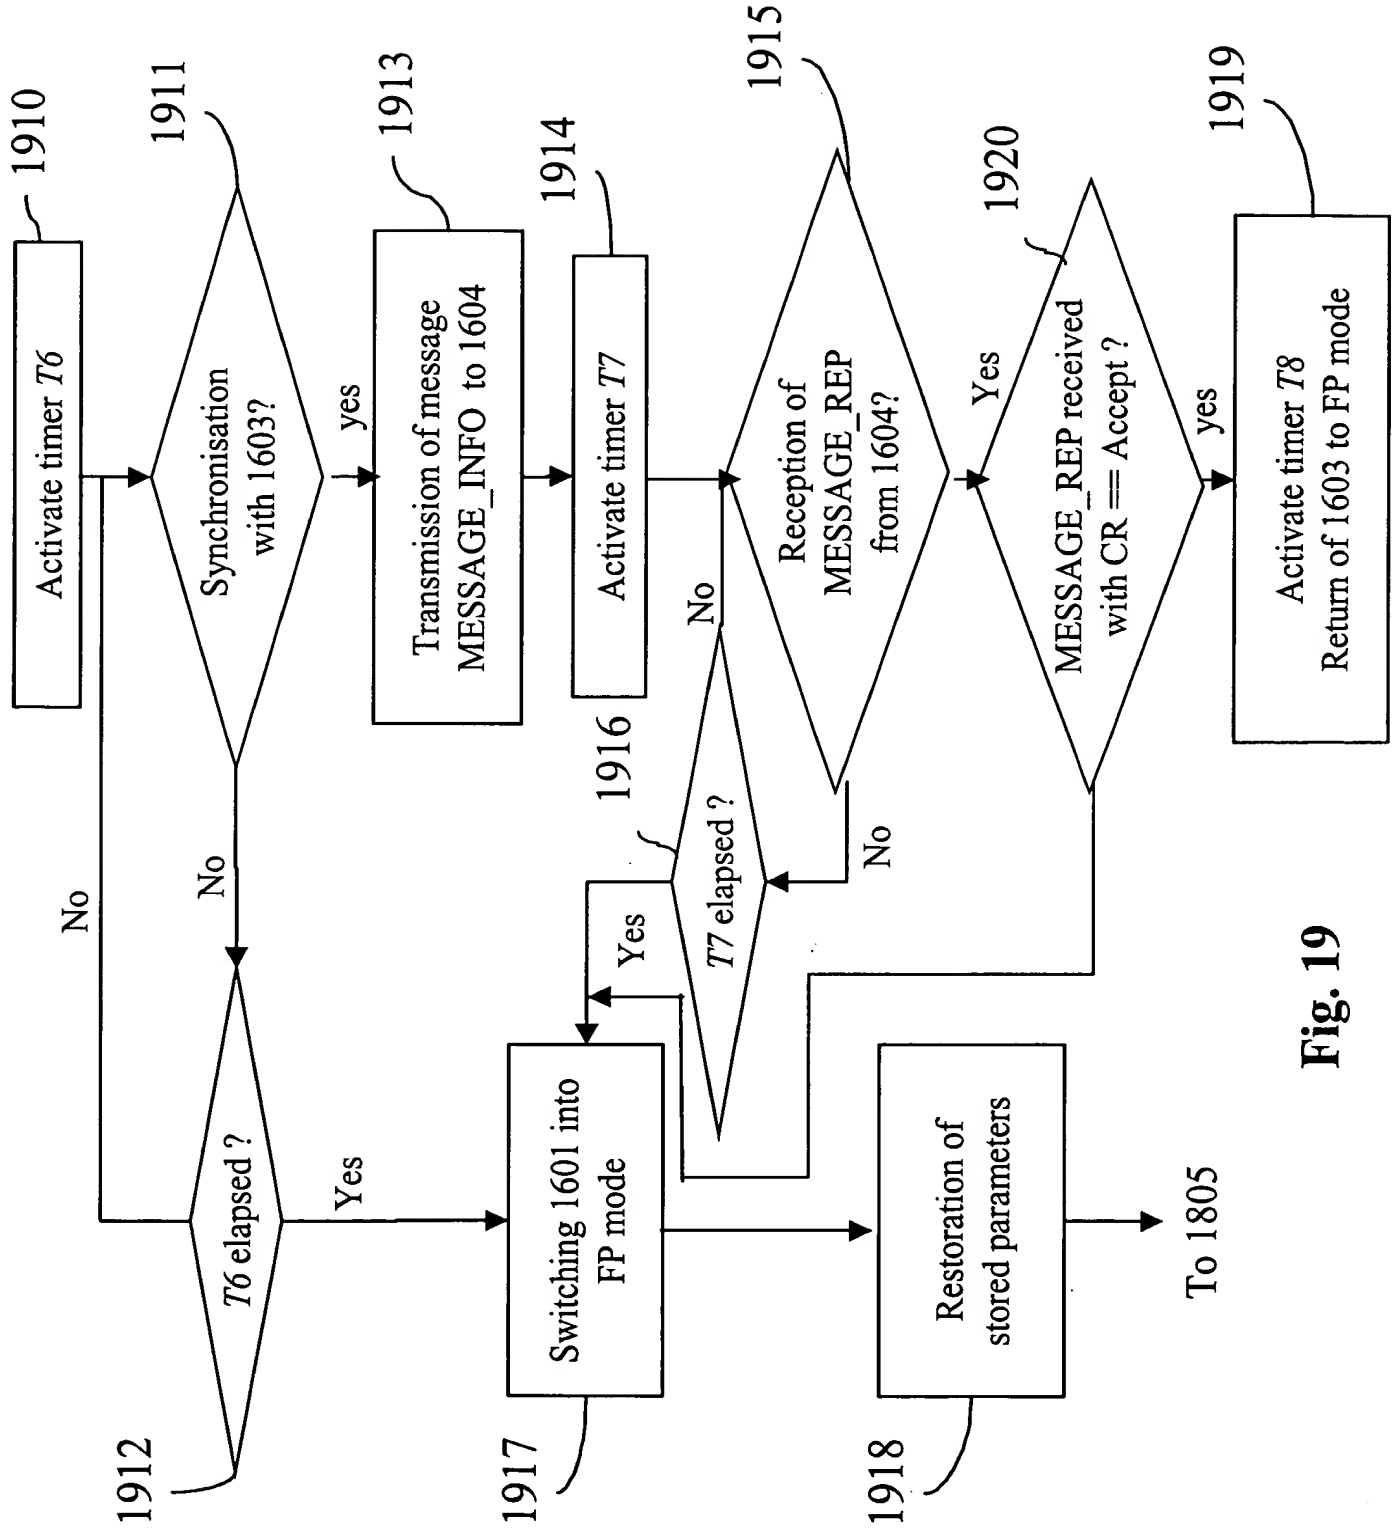


Fig. 19

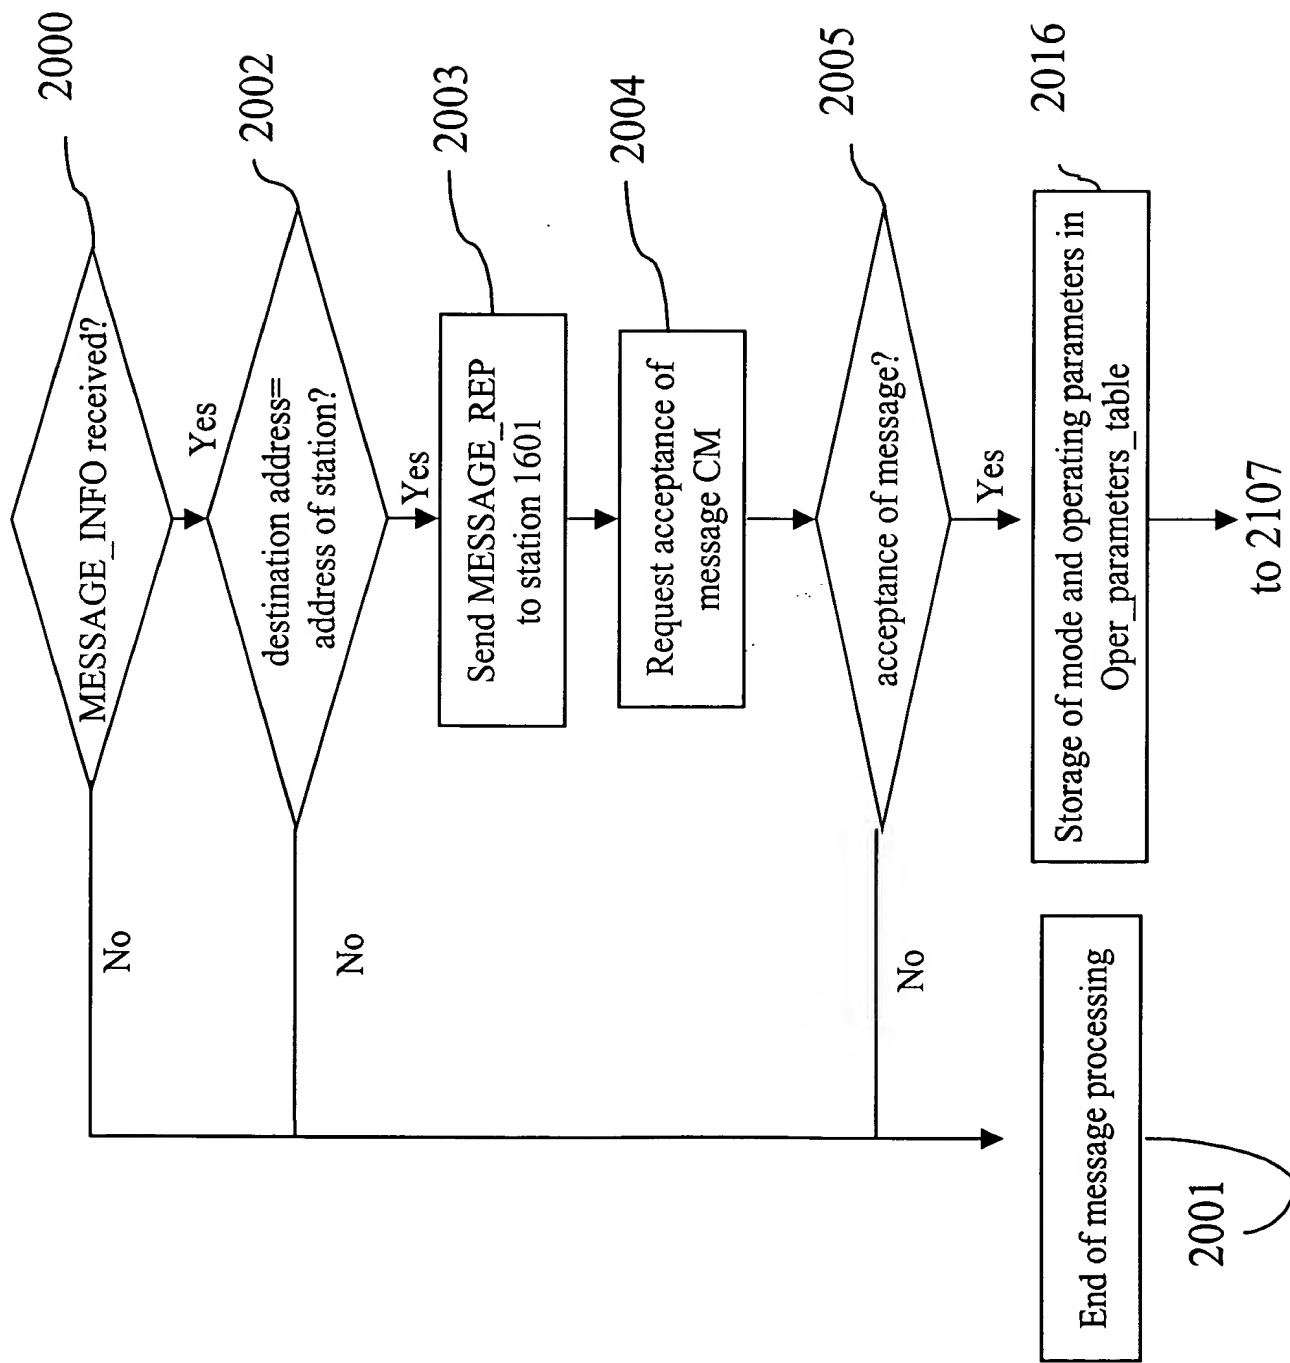


Fig. 20

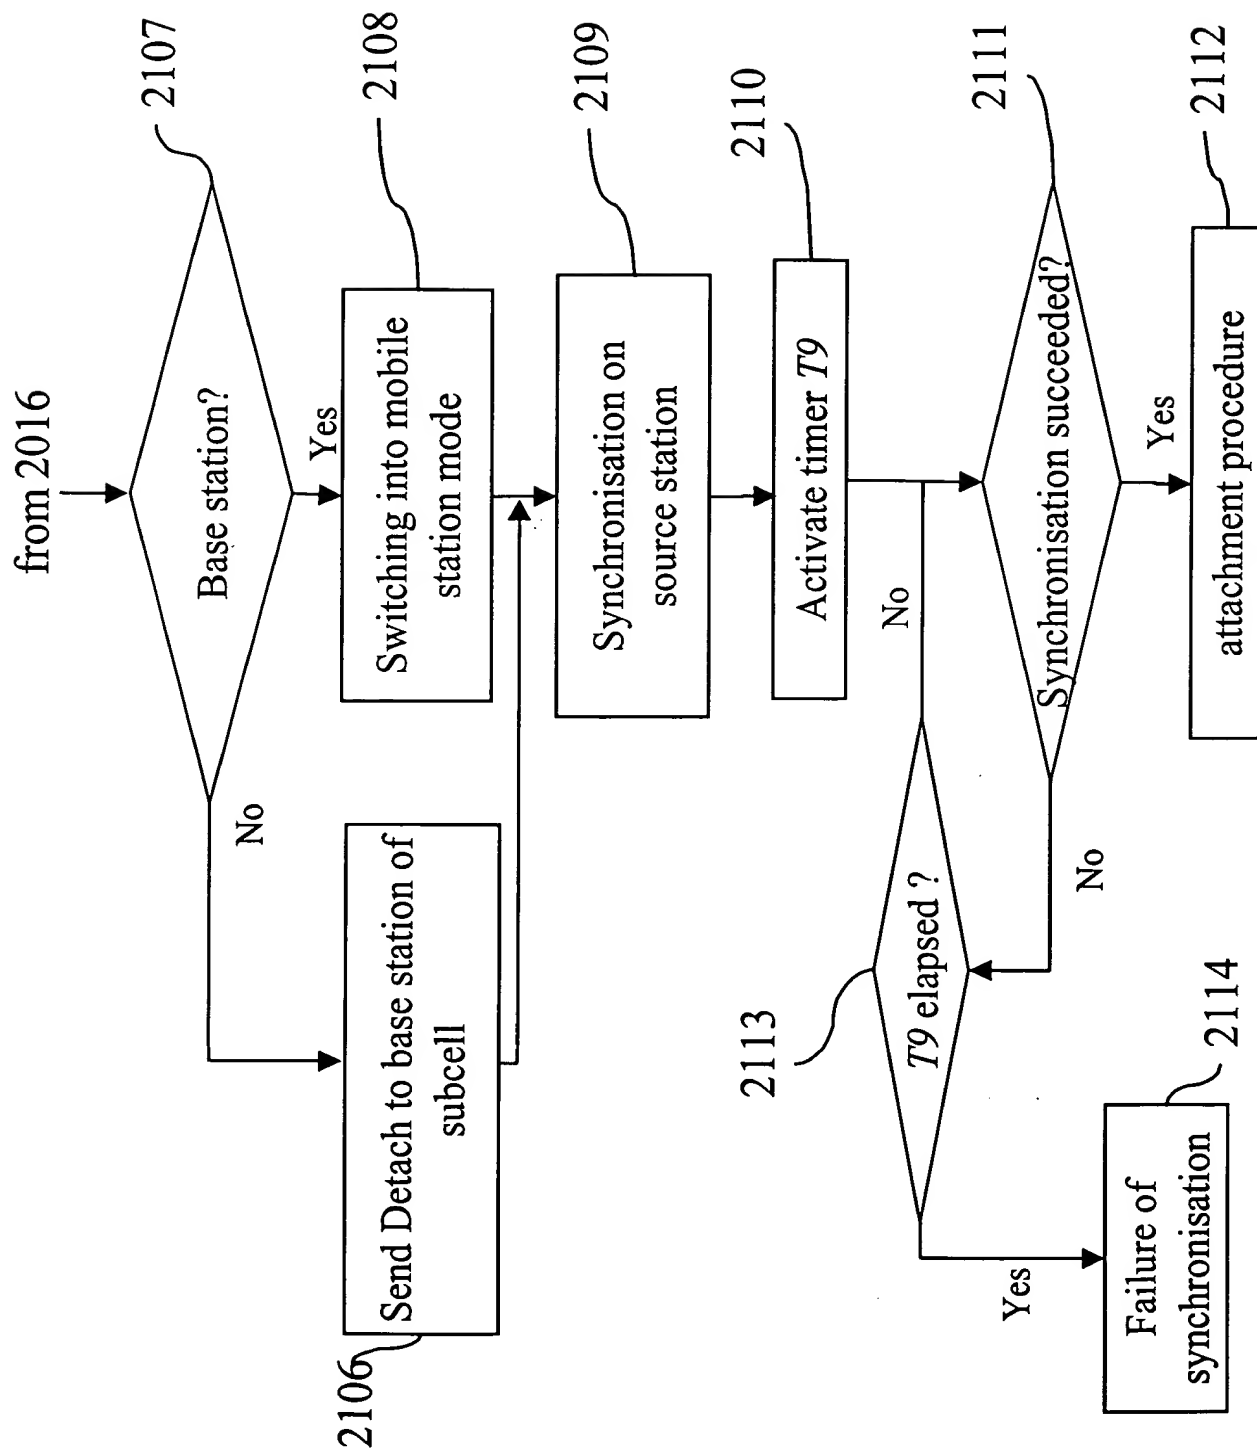


Fig. 21

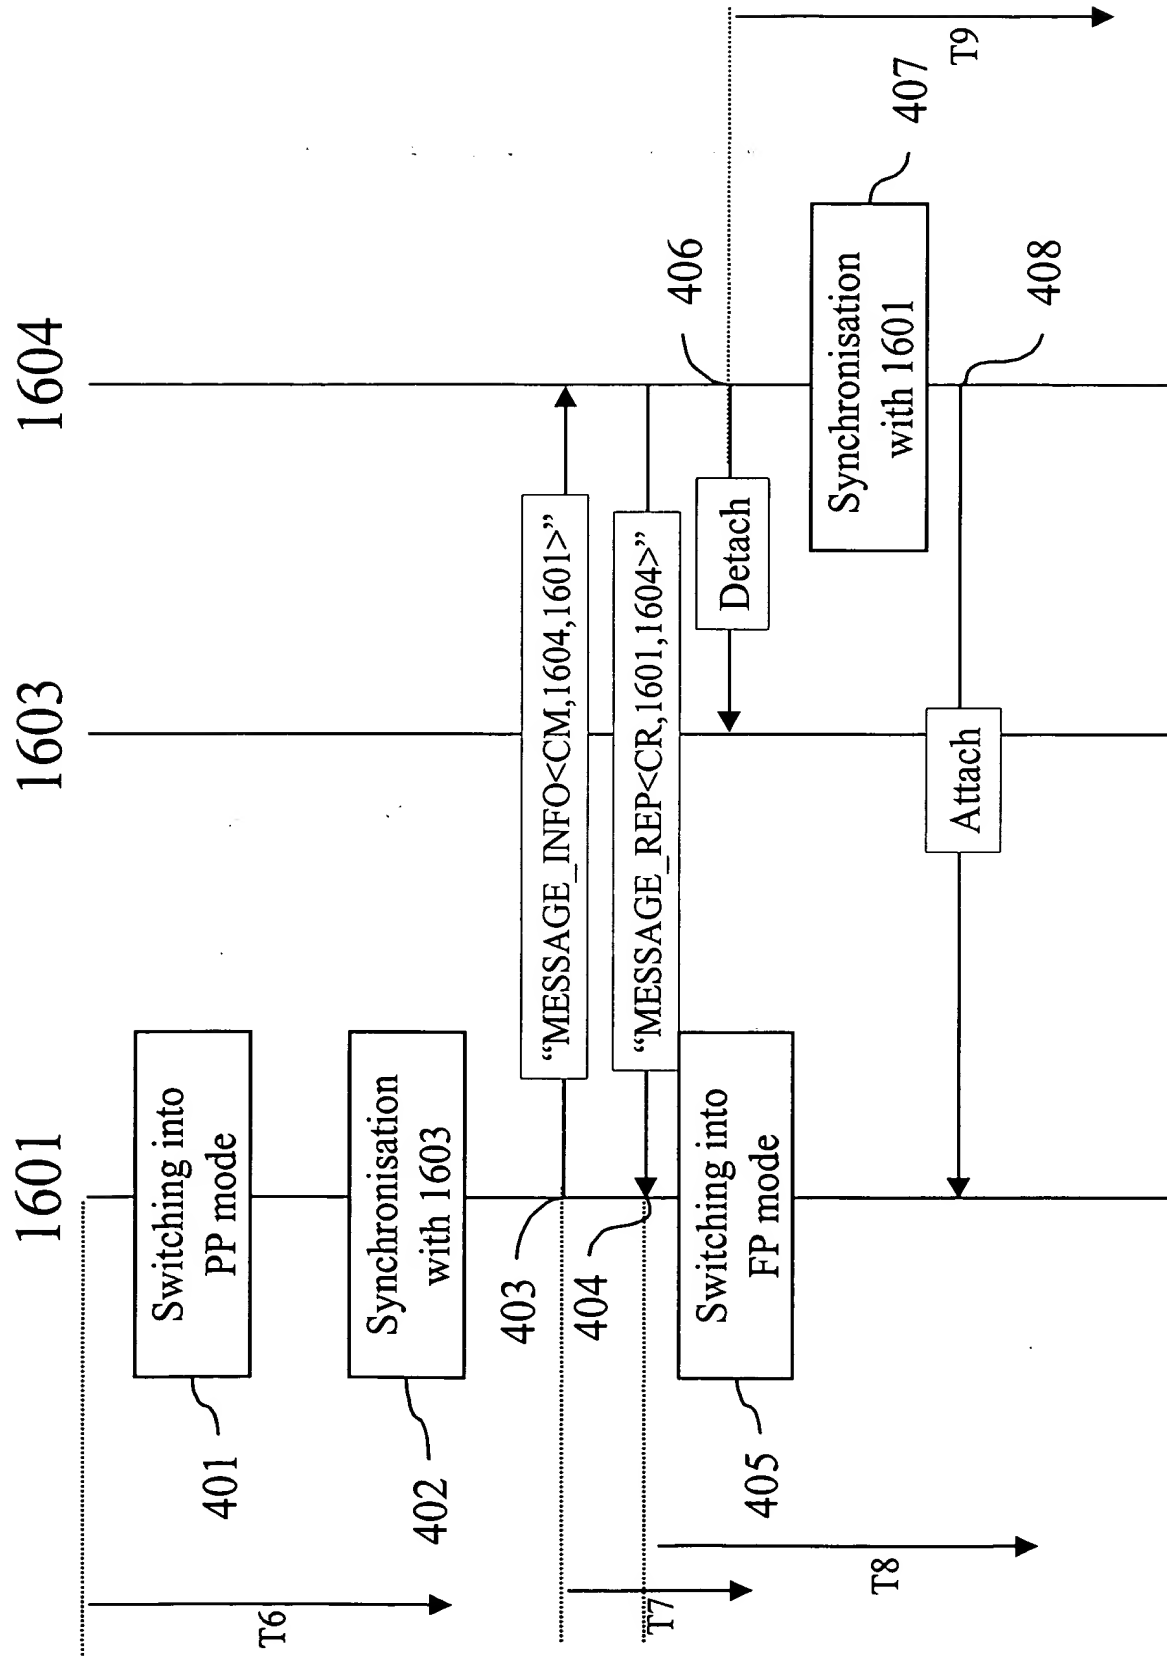


Fig. 22

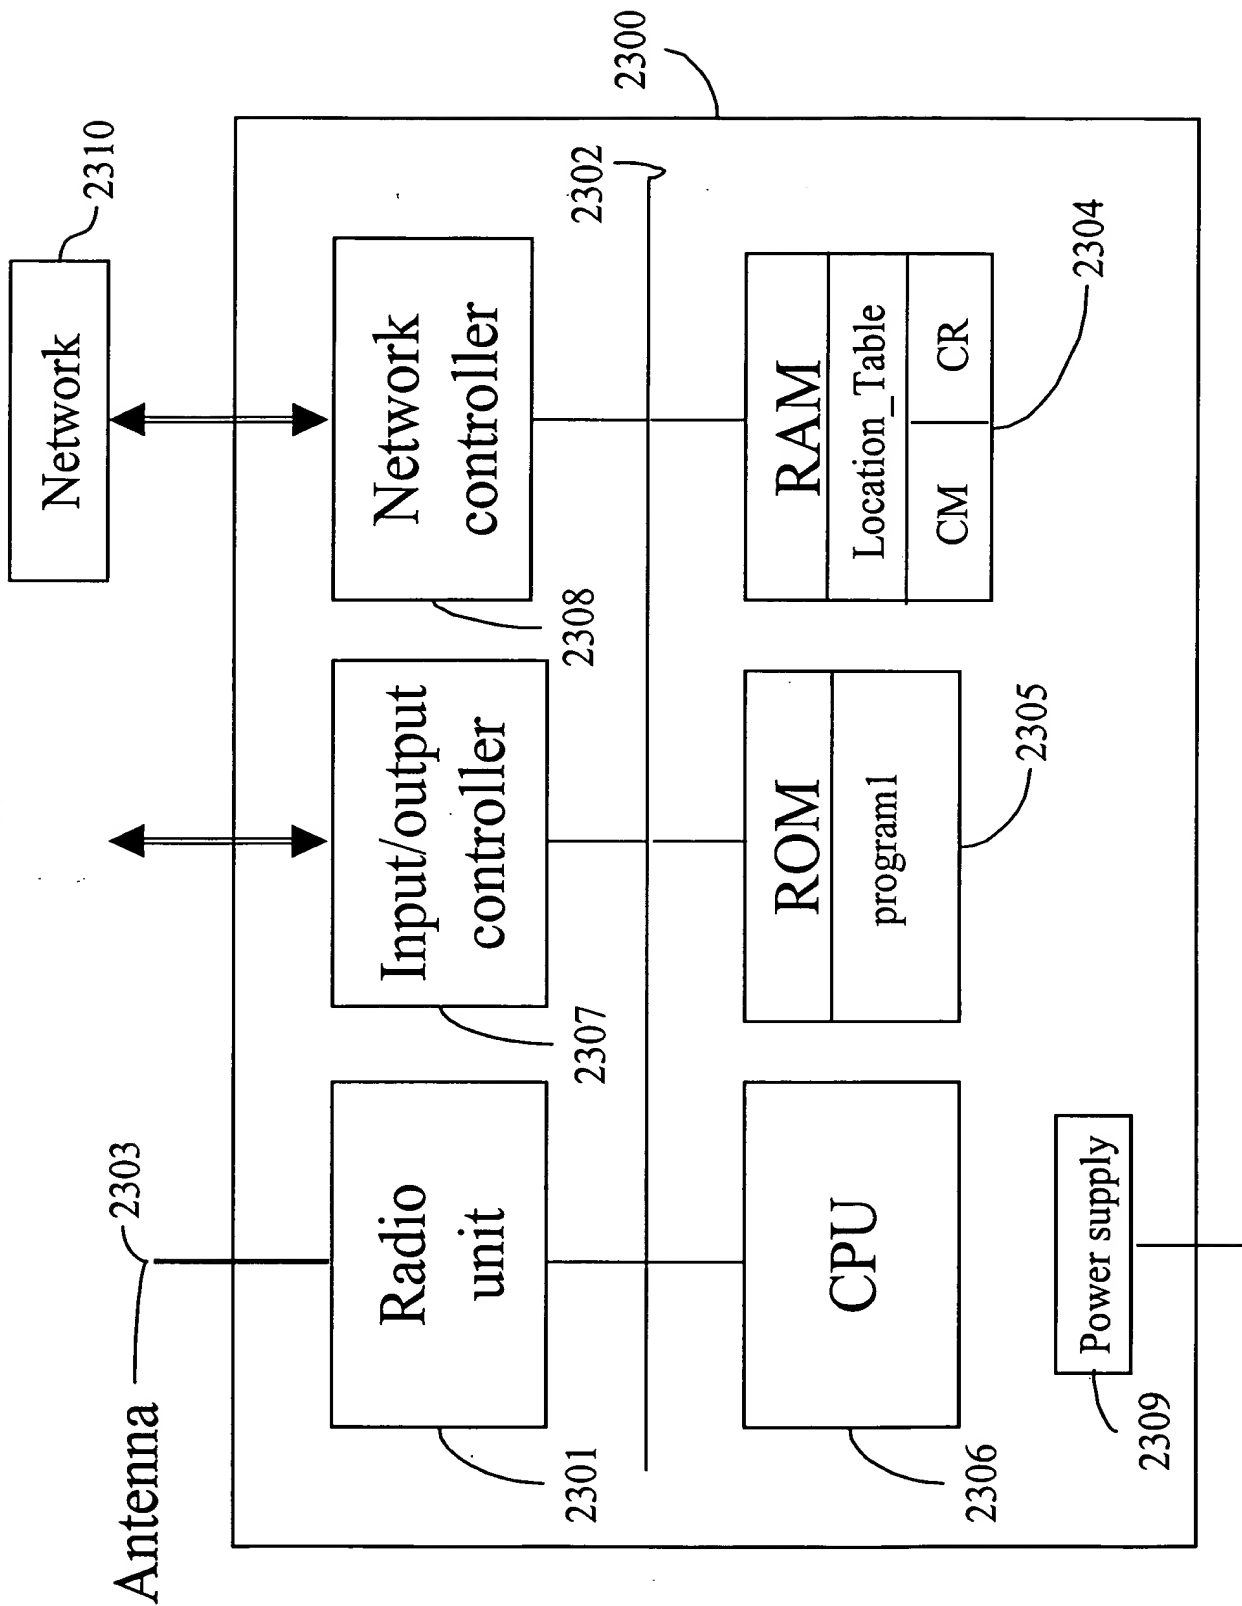


Fig. 23

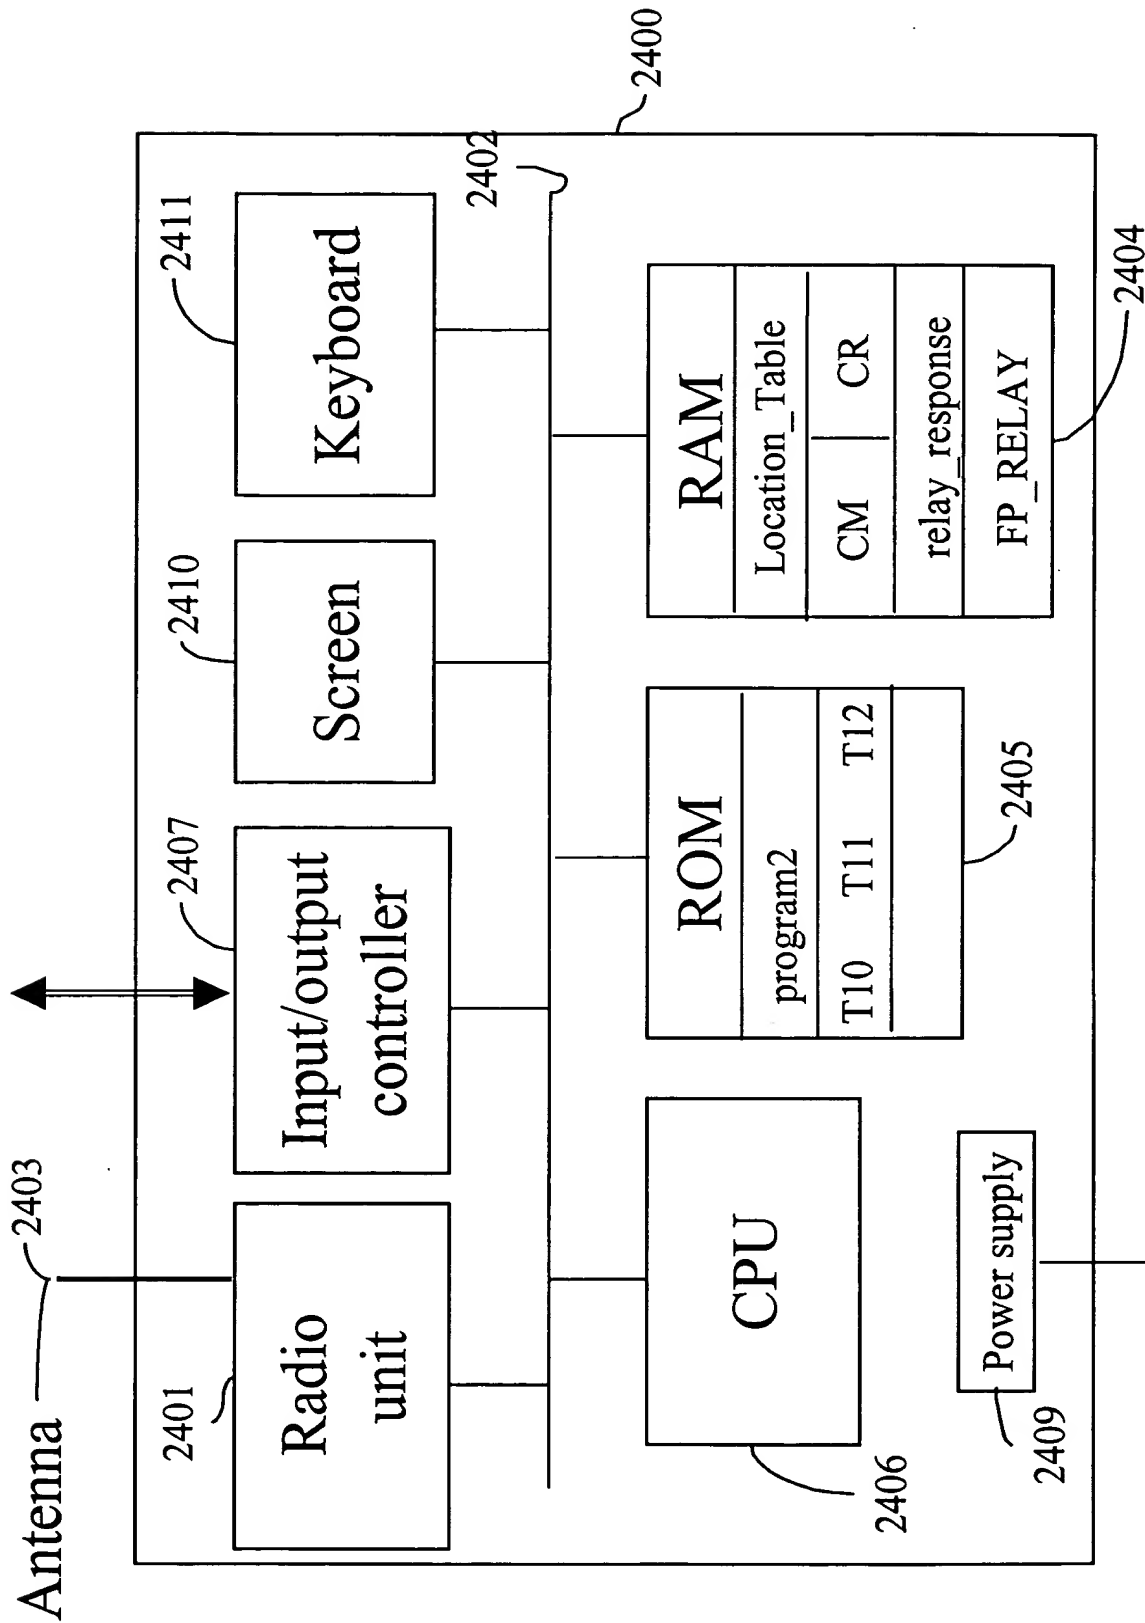


Fig. 24

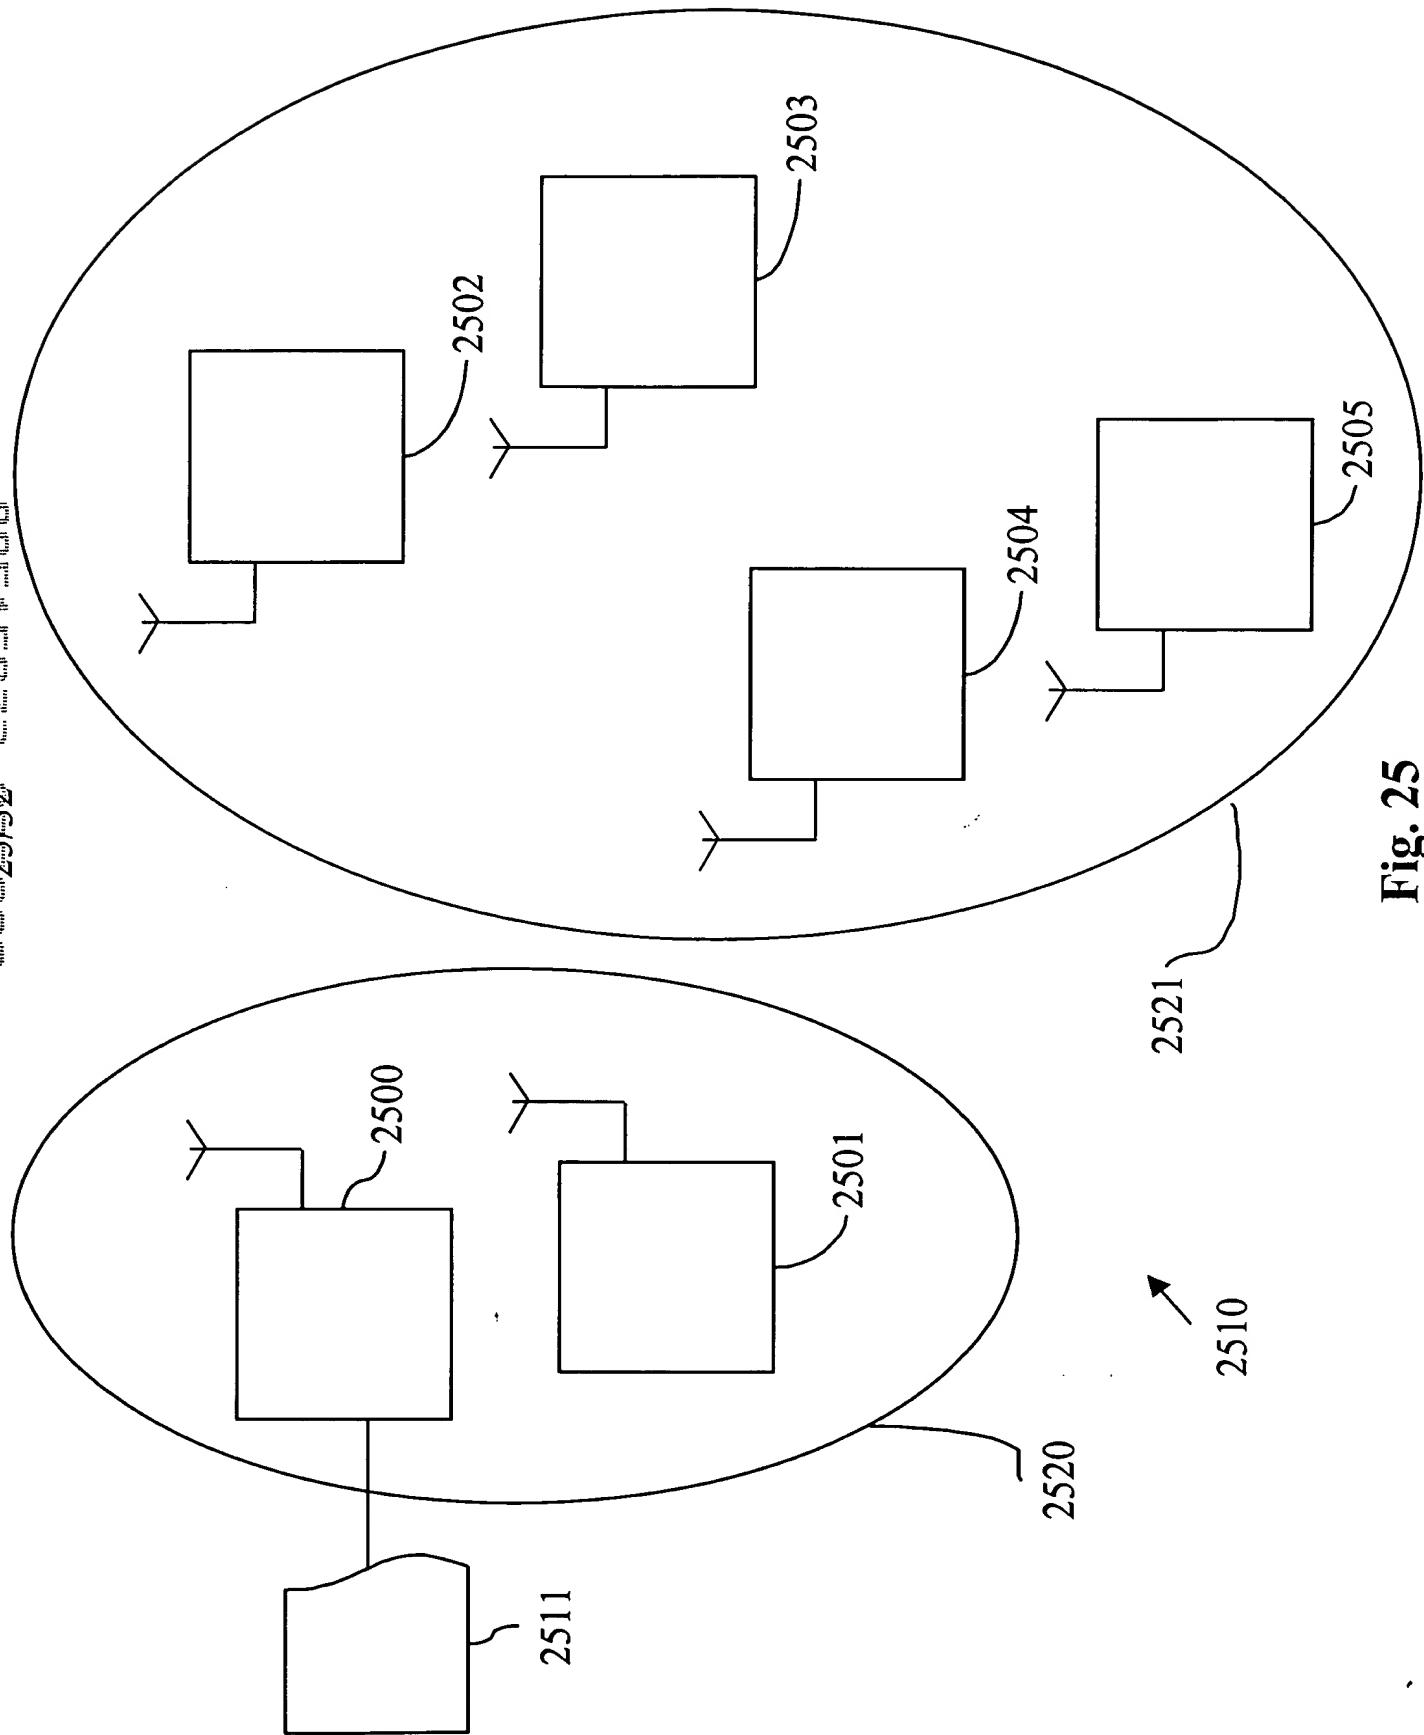


Fig. 25

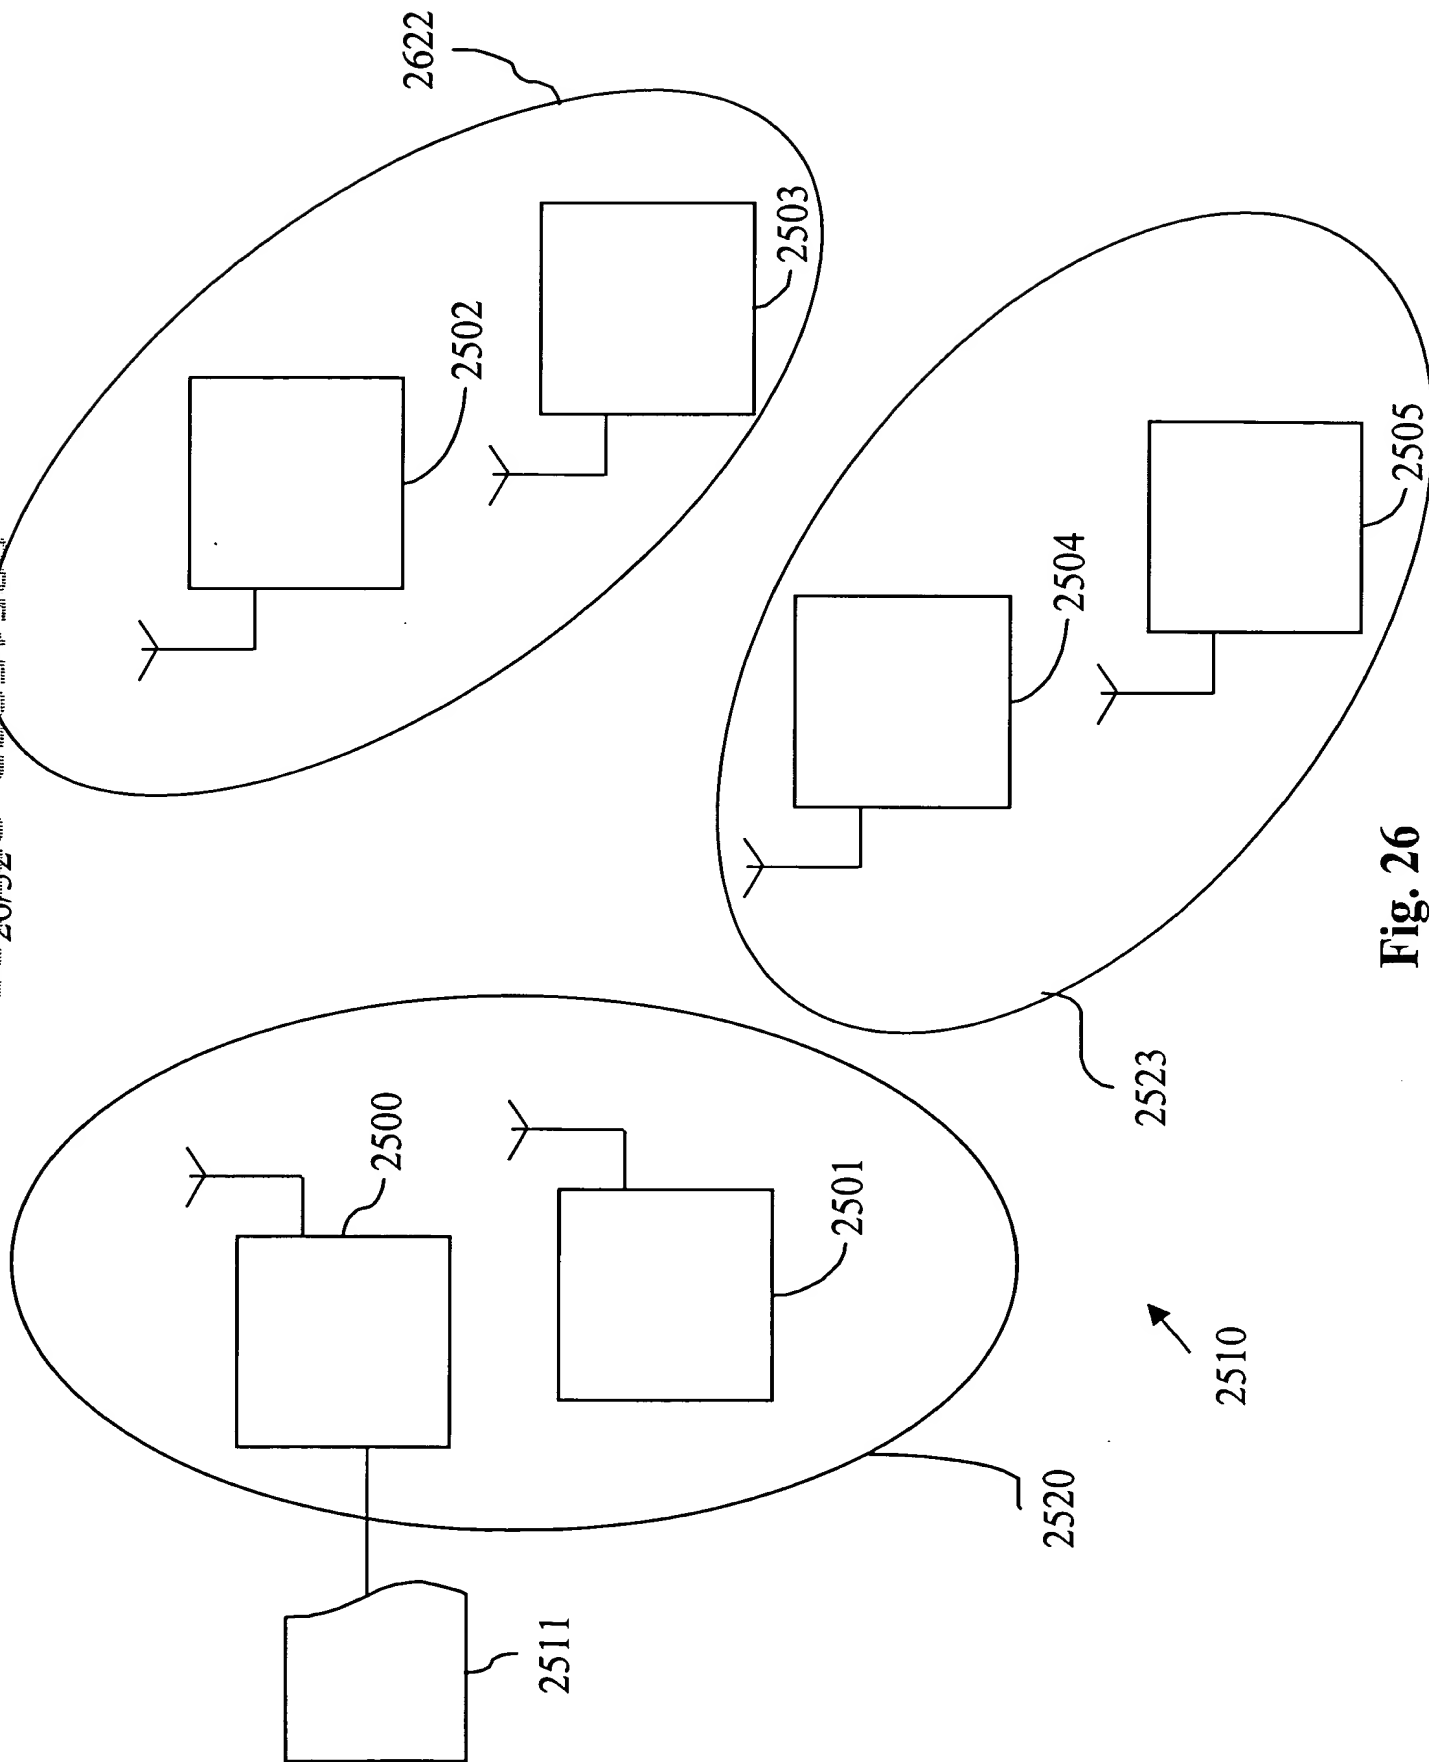


Fig. 26

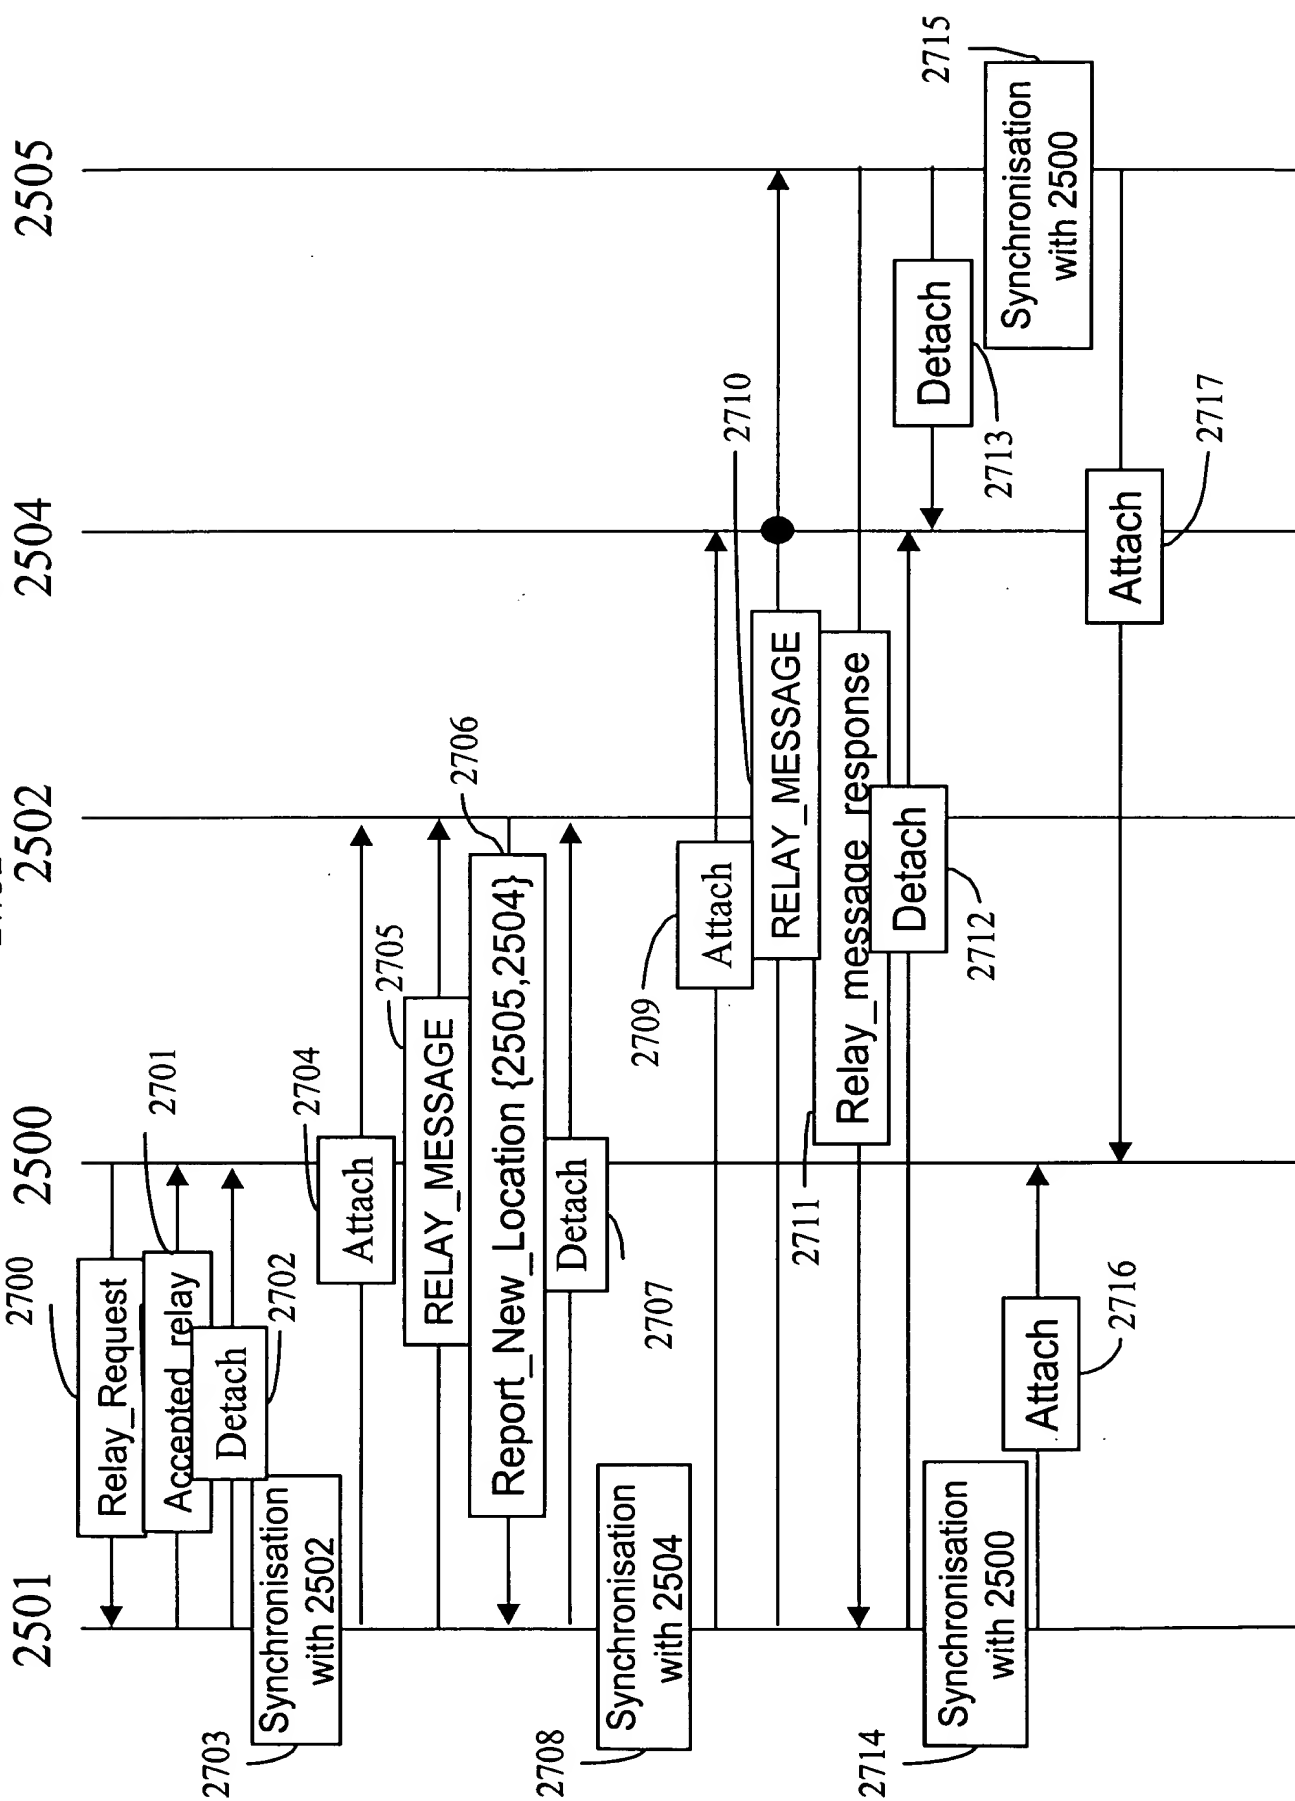


Fig. 27

2501 2500 2502 2503 2504 2505

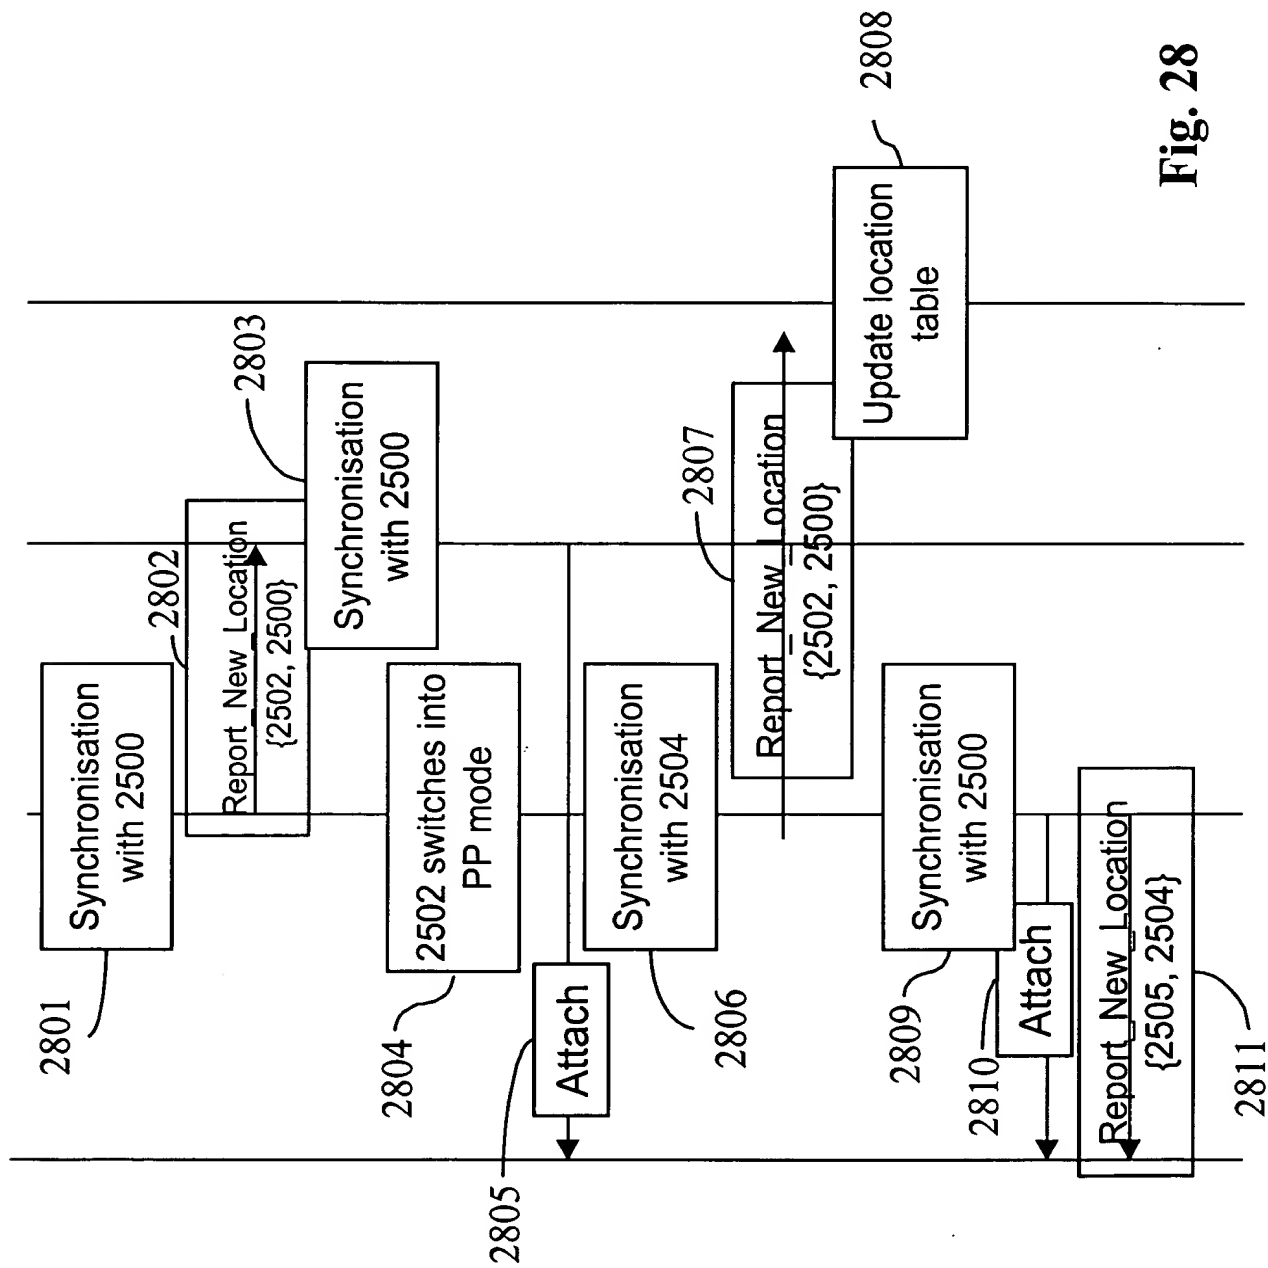


Fig. 28

00629732 24031560

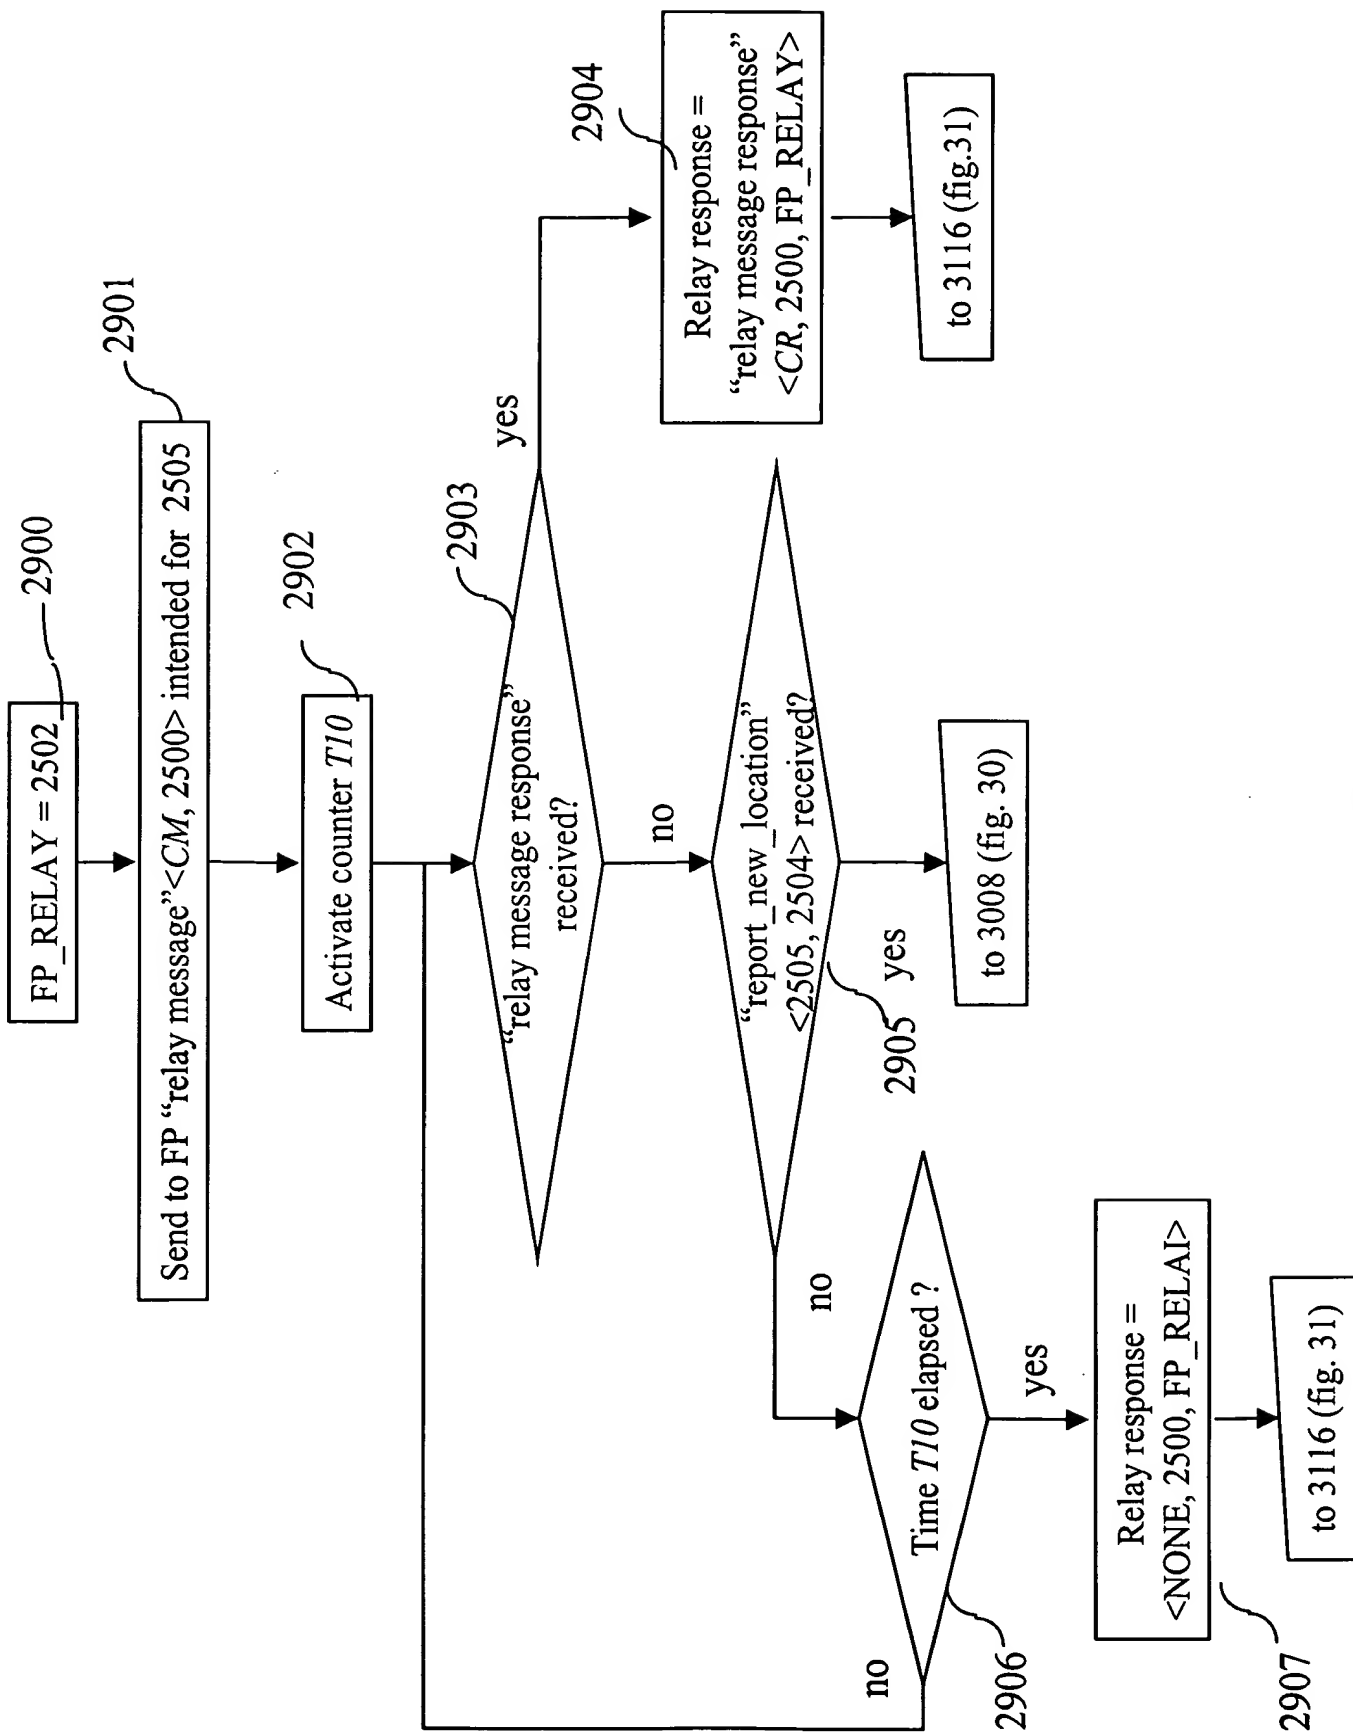


Fig. 29

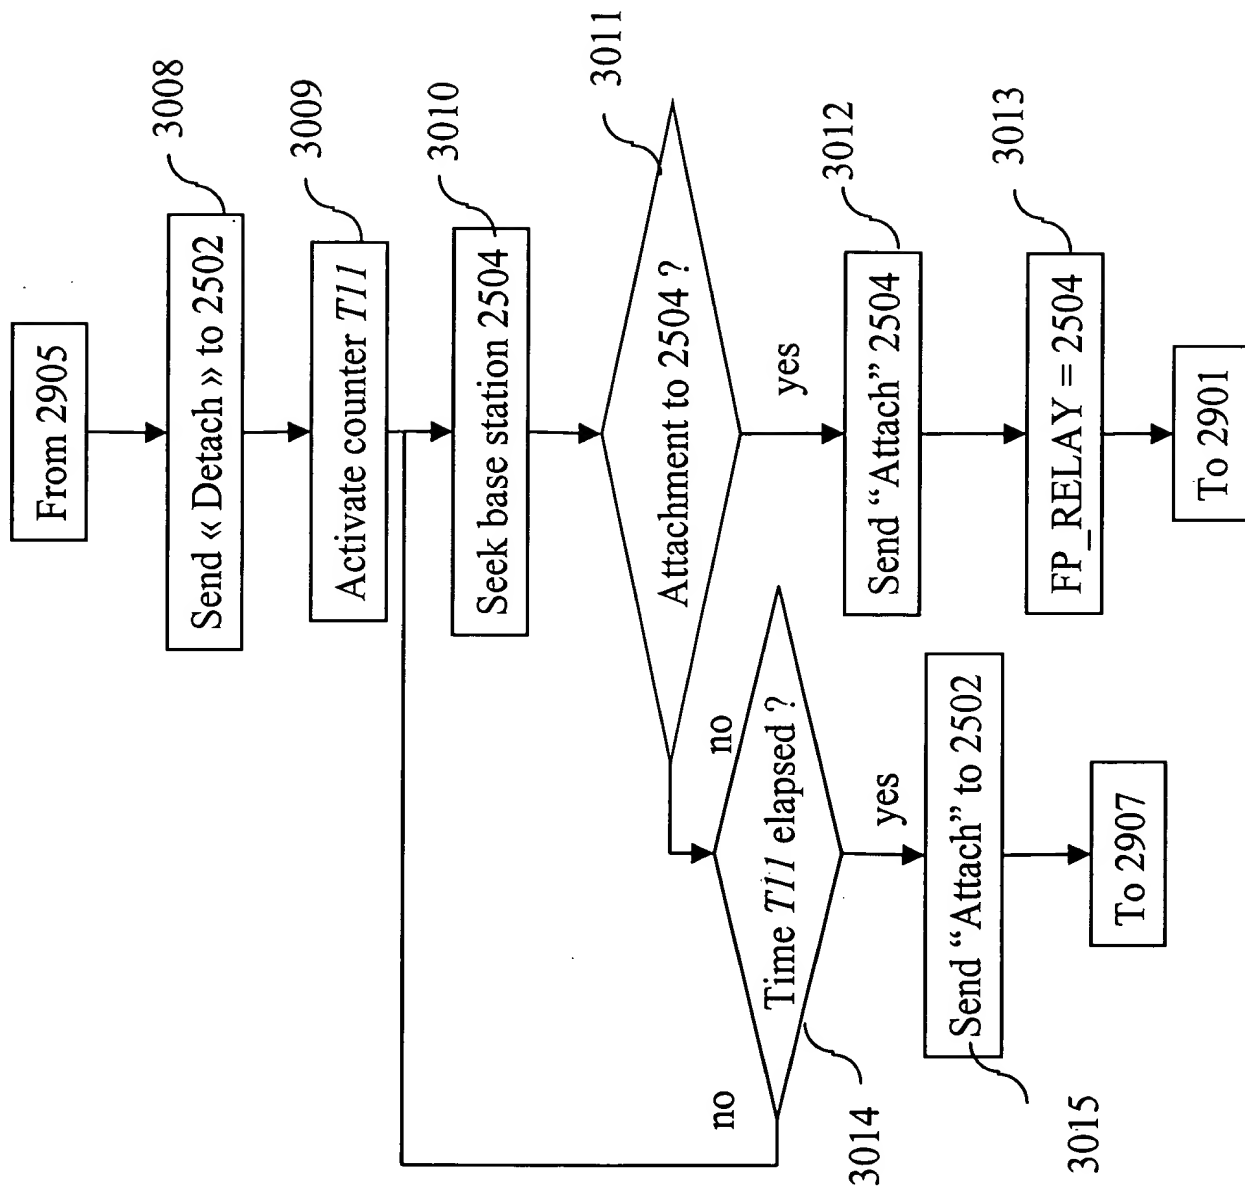


Fig. 30

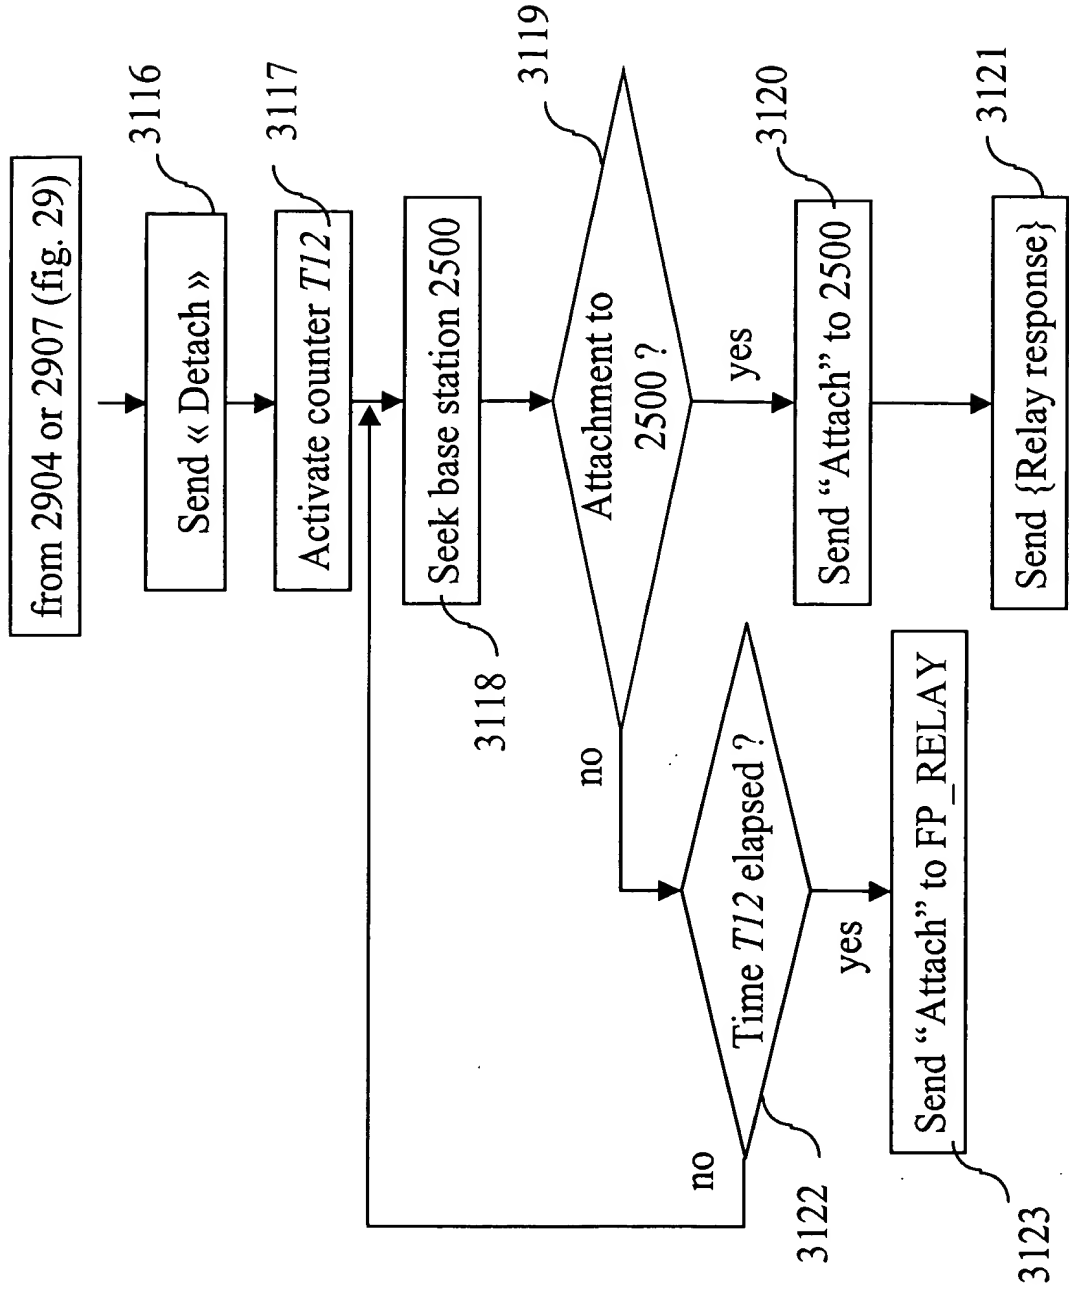


Fig. 31

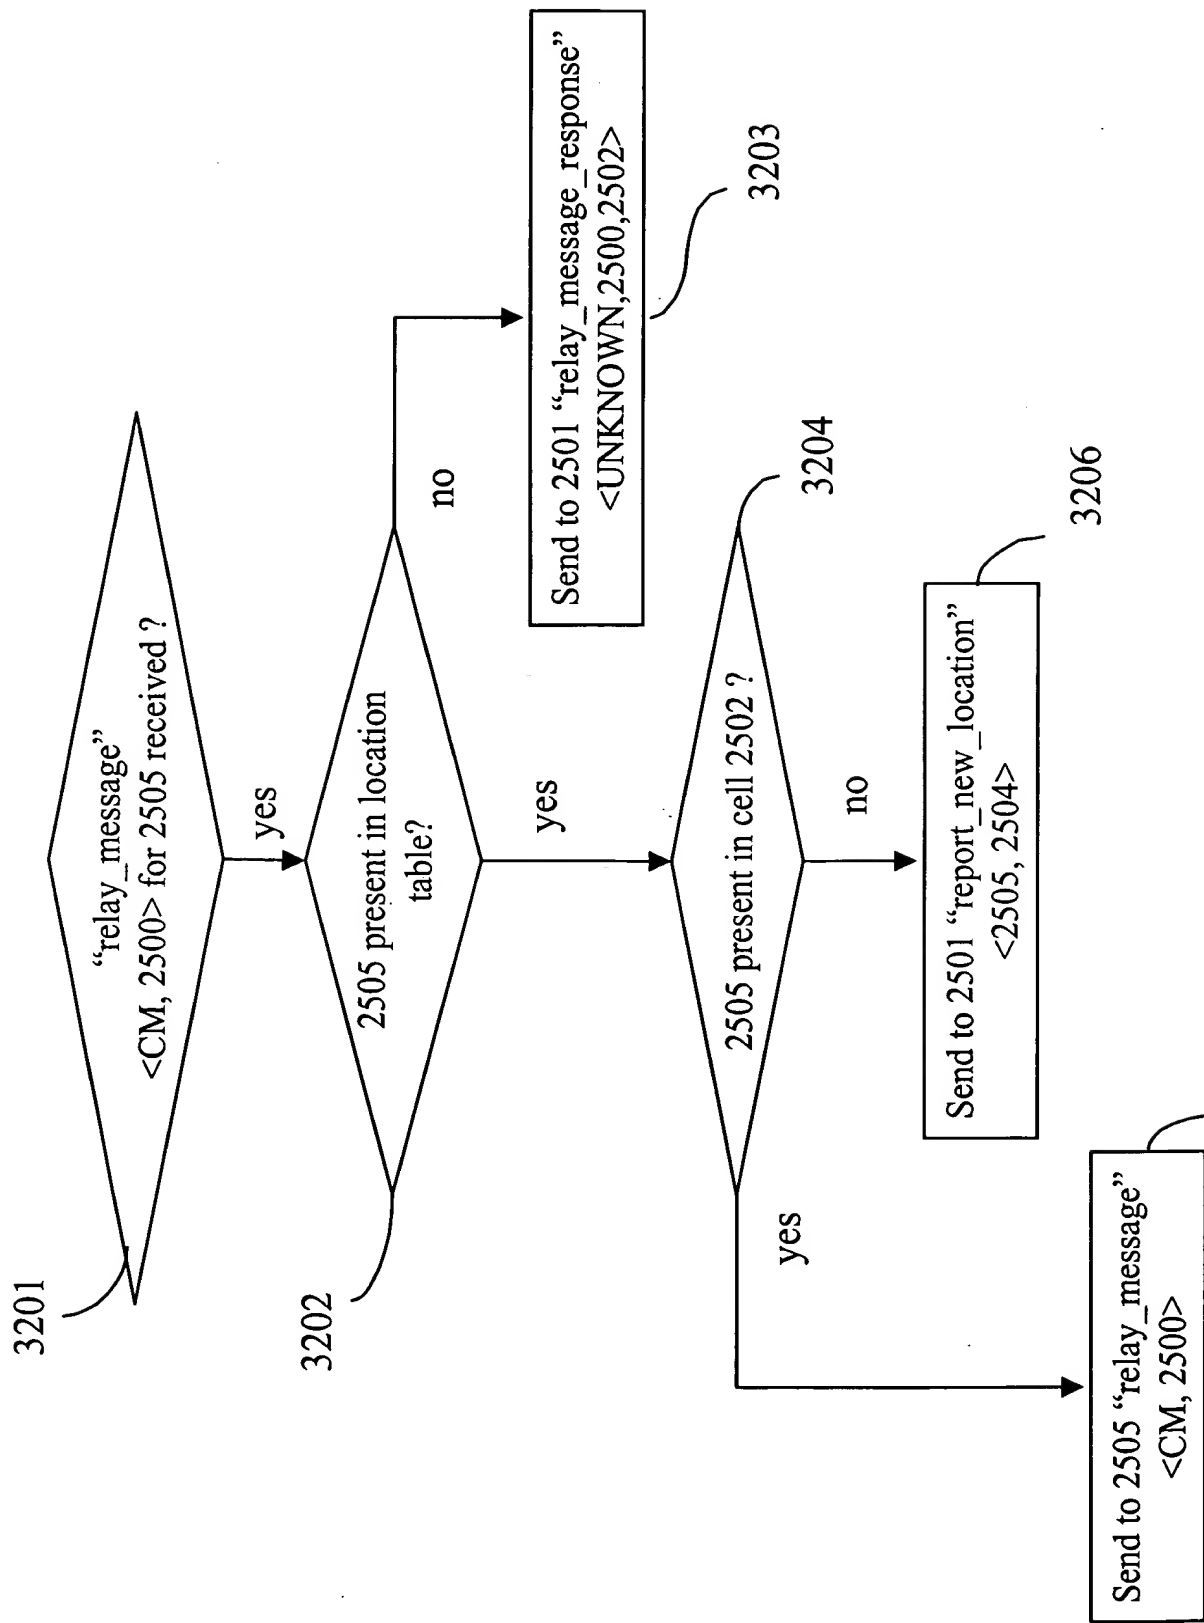


Fig. 32